

MAINTENANCE AND OPERATION  
INSTRUCTION MANUAL

# **DB9410-RX**

Professional MPX over IP Decoder  
with MicroMPX

# **DB9410-SFN**

Professional MPX over IP Decoder  
with MicroMPX and SFN Support



# Contents

<b>Introduction</b> .....	<b>6</b>
<b>Typographic conventions</b> .....	<b>7</b>
<b>DB9410-RX General Information</b> .....	<b>8</b>
<i>DB9410-RX Professional MPX over IP Decoder</i> .....	8
<i>DB9410-RX Product Features</i> .....	9
<i>DB9410-RX Technical Specifications</i> .....	9
<b>DB9410-SFN General Information</b> .....	<b>11</b>
<i>DB9410-SFN Professional MPX over IP Decoder with <math>\mu</math>MPX and SFN Support</i> .....	11
<i>DB9410-SFN Product Features</i> .....	12
<i>DB9410-SFN Technical Specifications</i> .....	12
<b>Panel Indicators and Appointments</b> .....	<b>14</b>
<i>Front Panel</i> .....	14
<i>Rear Panel</i> .....	15
<i>The Pinout of a DB15 HD GPIO / GPS Connector</i> .....	16
<i>GPI Example Connections</i> .....	17
<i>GPO Example Connections</i> .....	18
<i>Internal Connections of the GPIO Port</i> .....	19
<b>Block diagram</b> .....	<b>20</b>
<b>Safety Warning</b> .....	<b>21</b>
<b>Operating Recommendations</b> .....	<b>22</b>
<b>Unpacking and inspection</b> .....	<b>23</b>
<b>Mounting</b> .....	<b>23</b>
<i>Rack Requirements IU</i> .....	23
<i>Rack Requirements Compact Units</i> .....	23
<i>Stand-Alone Devices</i> .....	23
<b>Overview</b> .....	<b>24</b>
<b>Getting Started</b> .....	<b>25</b>
<i>Connection</i> .....	25
<i>Network Settings</i> .....	25
<i>Network Discovery</i> .....	25
<i>Network Security Recommendations</i> .....	26
<i>LAN Port</i> .....	26
<b>Network Discovery</b> .....	<b>27</b>
<i>DEVA Ethernet Setup Tool</i> .....	27
<i>Download latest version</i> .....	27
<i>Using the tool</i> .....	27
<b>MicroMPX Decoder Configuration</b> .....	<b>30</b>
<i>Connecting to a FM Transmitter &amp; Calibrating</i> .....	30
<b>About the MicroMPX Codec</b> .....	<b>31</b>
<i>A Distinction from L/R signals</i> .....	31
<b>Use Cases &amp; Applications</b> .....	<b>32</b>
<i>Simple STL: Use with Any FM Processor</i> .....	32
<i>One Processor to Many Transmitters</i> .....	33
<i>Use with private networks and IP radios</i> .....	34
<i>Redundant Paths and Backup Scenarios</i> .....	35
<i>Single Encoder &amp; Decoder, Dual Networks</i> .....	35
<i>Dual Encoder, Single Decoder</i> .....	36

<i>Dual Encoder, Dual Decoder</i> .....	37
<i>SFN + GPS</i> .....	38
<b>Technical Notes</b> .....	<b>39</b>
<i>MicroMPX Codec Setup Tips and Best Practices</i> .....	39
<i>Packet Jitter</i> .....	39
<i>Packet Loss</i> .....	39
<i>Firewall and Security</i> .....	39
<i>Tilt Correction</i> .....	40
<i>Cooling</i> .....	40
<b>WEB Interface</b> .....	<b>41</b>
<i>Network Discovery</i> .....	41
<i>Access</i> .....	41
<i>Stream</i> .....	42
<i>Backup player</i> .....	42
<i>MPX Output Level</i> .....	43
<i>Adjusting the Output Level</i> .....	43
<i>Important Level Considerations</i> .....	43
<i>Stream Receiver Configuration</i> .....	43
<i>Changing the Port Number</i> .....	43
<i>FM Outputs</i> .....	44
<i>Demodulated Output</i> .....	44
<i>Test Signal Generator</i> .....	45
<i>Signal Capabilities</i> .....	45
<i>Setting Frequency</i> .....	45
<i>Decoder Dashboard</i> .....	46
<i>Stream Display</i> .....	46
<i>Packet Loss and Dropouts</i> .....	46
<i>Waveform Display</i> .....	47
<i>MPX Display</i> .....	47
<i>Security</i> .....	48
<i>GPS</i> .....	49
<i>Decoder</i> .....	49
<i>Connecting a third party GPS receiver</i> .....	50
<i>Understanding the MicroMPX Decoder stream info display</i> .....	52
<i>User accounts</i> .....	53
<i>as Administrator</i> .....	53
<i>as User</i> .....	53
<i>System</i> .....	54
<i>Account</i> .....	54
<i>RDS</i> .....	54

<b>APPENDIX A - Possible problems and solutions</b> .....	<b>55</b>
<i>Peak control is not perfect</i> .....	55
<b>APPENDIX B - Recovery mode</b> .....	<b>56</b>
<i>How to enter Recovery mode?</i> .....	56
<i>Firmware update</i> .....	57
<i>LOGs</i> .....	59
<i>Recovery menu</i> .....	59
<b>WARRANTY TERMS AND CONDITIONS</b> .....	<b>60</b>
<b>Product Registration Card</b> .....	<b>61</b>

THIS PAGE  
IS INTENTIONALLY  
LEFT BLANK

## Introduction

DEVA Broadcast Ltd. is an international communications and high-technology manufacturing organization, its corporate headquarters and facility located in Burgas, Bulgaria. The company serves the broadcast and corporate markets worldwide – from consumers and small businesses to the largest global organizations. It is dedicated to the research, design, development and provision of advanced products, systems and services. DEVA Broadcast launched its own brand back in 1997 and has nowadays evolved to become known as a market leader and internationally reputed manufacturer of user-friendly, cost-effective and innovative broadcast products.

Creativity and innovation are deeply woven into DEVA Broadcast corporate culture. Through successful engineering, marketing and management our team of dedicated professionals creates future-oriented solutions to improve customers' performance. You may rely that all issues communicated to our crew would be addressed accordingly. We pride ourselves on our pre and post-sales support and purchase services, which along with the outstanding quality of our radio gear have won us due respect and the market authority position.

DEVA Broadcast best-of-breed solutions have become the best sellers for our partners. The strategic partnerships which have been formed with industry leaders during all these years that we have been operating on the broadcasting market, have proved us a reliable business partner and a valuable asset, as our dealers worldwide would confirm. In constant pursuit of precision and long-term satisfaction, DEVA Broadcast enhances the reputation of our partners and clients alike. Furthermore, we have already a proven merit as a credible partner provider.

Our portfolio offers complete line of high quality and competitive products for FM and Digital Radio, Radio Networks, Telecommunication Operators and regulation authorities. For almost two decades of intensive software and hardware development, we have achieved a unique price-performance and endurance of our product lines. Our company's multitude of equipment and services is in line with the latest technologies and key trends. The most recognizable characteristics attributed to DEVA Broadcast products are their clear-cut, streamlined design, easiness of use and cost-effectiveness: simplicity of forms but multiplicity of functions.

For us there is no stage when we deem that we have reached the most satisfactory level in our work. Our engineers are in constant pursuit of new ideas and technologies to be captured in DEVA Broadcast solutions. Simultaneously, a strict control is being exercised at each step of any new development. Experience and hard work are our fundament but the continuous improving process is what we never leave aside. DEVA Broadcast participates on a regular basis in all landmark broadcasting events, not only to promote its products, but to exchange valuable know-how and experience. We are also engaged in international large-scale projects involving radio and audio solutions which makes us even more competitive on the global market.

All DEVA Broadcast products are developed and produced in accordance with the latest ISO 9001 quality control standards.

## Typographic conventions

The following table describes important conventions used in the manual.

Convention and Style	Description	Examples
<i>Menu &gt; Sub Menu &gt; Menu Command</i>	A menu item(s) and menu command that you need to click in sequence	Click <i>Settings &gt; General</i>
[Button]	Interface Interactive buttons	Press [OK] to save the changes
<b>NOTE</b>	Important notes and recommendations	<b>NOTE:</b> The notification will appear only once
<u>“Reference Name” on Page XXX</u>	References and links	refer to <u>“New Connection”</u> (see <u>“Monitoring” on page 56</u> )
Example	Used when example text is cited	Example for E-mail Notification: Date: 04 Nov 2013, 07:31:11

## **DB9410-RX General Information**

### **DB9410-RX PROFESSIONAL MPX OVER IP DECODER**

The DB9410-RX is a next-generation, MPX over IP Decoder engineered to deliver reliable and efficient audio transmission for professional FM broadcasting. Utilizing the purpose-built MicroMPX ( $\mu$ MPX) algorithm developed by Thimeo, the DB9410-RX ensures high-quality audio reproduction with remarkably low network bandwidth starting from just 320 kbps. Designed specifically for FM MPX transport,  $\mu$ MPX preserves the integrity of the stereo signal and RDS data while significantly reducing IP requirements, making the DB9410-RX ideal for applications over narrowband or public IP links.

Compact yet powerful, the DB9410-RX fits seamlessly into any broadcast infrastructure. LED indicators on the front panel provide instant system status, while an intuitive HTML5-based web interface allows complete configuration and monitoring from any desktop or mobile browser. For added convenience and control flexibility, the device supports remote access via HTTPS, FTP, NMS, and SNMP protocols empowering engineers to manage systems from virtually anywhere.

Engineered with DEVA's hallmark attention to detail and reliability, the DB9410-RX delivers pristine audio quality thanks to top-grade DAC components and precision signal processing. It supports both Digital AES192 and Analog MPX outputs, ensuring compatibility with a wide range of FM transmitters and studio setups. Whether deployed at a single transmission point or within a larger network, the DB9410-RX guarantees low-latency, uninterrupted signal decoding across all environments.

The DB9410-RX stands as a testament to DEVA's commitment to innovation and customer-driven design, offering an advanced, cost-effective solution for MPX over IP distribution. Its support for  $\mu$ MPX sets it apart as a future-ready decoder that meets the growing need for efficient, high-performance broadcast tools.

Choosing DEVA's DB9410-RX means choosing reliability, flexibility, and the confidence that comes with decades of expertise in broadcast technology.

## DB9410-RX PRODUCT FEATURES

- High quality FM MPX decoding function
- High end DAC converter for optimal quality
- Ultra low latency, all-digital DSP based design
- Remotely upgradable firmware to ensure improved operation
- Headphone audio output
- Very Intuitive Embedded WEB server for interactive supervision
- Full online remote control of all parameters via IP
- Configuration via web user interface for easy setup
- Optional Redundant 230V or 48V (DC) power supply
- Forward Error Correction to reduce bit errors in data stream
- USB flash drive for Audio Backup Storage
- SNMP v2c agent permitting full device management
- Apple and Android devices support
- SNTP for automatic synchronization of the built-in clock
- Protected access to the device settings
- LAN port for full TCP/IP remote control and monitoring
- Attractive price and very good price-performance ratio
- Proved and reliable hardware for 24/7/365 operating
- 1U Rack mountable Aluminum Case for high RF immunity
- Easy Installation and Setup

## DB9410-RX TECHNICAL SPECIFICATIONS

AUDIO DECODER	
Codec	μMPX or raw PCM
Sample rates	192 kHz and 216 kHz, 24 bits
Signal Processing	24 Bit AD/DA conversion
PCM	
Bit depth	12 - 16, 20, 24 bit
FEC	RIST, ProMPEG FEC #3, release 2
Bandwidth	2.4 - 4.6 Mbps (no FEC)
μMPX	
Bitrates	320, 384, 448, 576, 800 kbit/s
FEC	μMPX FEC, RIST, Pro-MPEG FEC #3 release 2
Bandwidth	320 - 800 kbps (no FEC)
ANALOG MPX OUTPUT	
Connector	BNC
Type	Unbalanced
Level	+14 dBu (max. +16 dBu)
Sample rate	192 kHz and 216 kHz, 24 bits
Dynamic range	121 dB
DIGITAL MPX AES192 OUTPUT	
Connector	RJ-45, balanced, EMI suppressed
Standard	AES3
Sampling Rate	up to 192kHz, 24 bits

<b>GPS PORT</b>	
Connector	DB15, Male
Protocol	NMEA 0183, 9600bps
Sync	1 PPS, Square Wave, TTL Compatible
<b>FRONT PANEL</b>	
Status Indicators	4 LEDs
Headphones	1/8" (3.5mm) phones jack
USB	Type A for Backup audio player
<b>USER INTERFACE</b>	
SNMP	ver.2c, ver.3
Web interface	Full control and Status information
<b>NETWORK</b>	
Connector	RJ-45
Type	Ethernet, 1000Mbps
Device discovery	UPnP support
<b>OPERATING CONDITIONS</b>	
Temperature	-15°C to 55°C
Humidity	< 95%, non-condensing
Altitude	0 to 5000m above sea level
<b>POWER</b>	
Voltage	100-240V / 50-60 Hz
Power Consumption	12VA
Connector	IEC320, Fused and EMI-suppressed
<b>OPTIONAL REDUNDANT POWER SUPPLY</b>	
Option 1: 220V AC	90 - 260V AC (nominal 100 - 240V AC) 47 - 63 Hz (nominal 50 - 60 Hz)
Option 2: 48V DC	36 - 72V DC (nominal 48V DC)
<b>SIZE AND WEIGHT</b>	
Dimensions (W;H;D)	485 x 44 x 180 mm
Shipping Weight	540 x 115 x 300 mm / 2.673 kg

## **DB9410-SFN General Information**

### **DB9410-SFN PROFESSIONAL MPX OVER IP DECODER WITH $\mu$ MPX AND SFN SUPPORT**

---

The DB9410-SFN is a next-generation, MPX over IP Decoder engineered to deliver reliable and efficient audio transmission for professional FM broadcasting. Utilizing the purpose-built MicroMPX ( $\mu$ MPX) algorithm developed by Thimeo, the DB9410-SFN ensures high-quality audio reproduction with remarkably low network bandwidth starting from just 320 kbps. Designed specifically for FM MPX transport, MicroMPX preserves the integrity of the stereo signal and RDS data while significantly reducing IP requirements, making the DB9410-SFN ideal for applications over narrowband or public IP links.

In addition to its advanced decoding capabilities, the DB9410-SFN introduces full Single Frequency Network (SFN) support, enabled through ultra-precise GPS timing synchronization. By aligning audio and MPX output timing with sub-microsecond accuracy, the unit ensures perfectly phase-coherent transmissions across multiple synchronized transmitters. This eliminates interference in overlap regions and guarantees seamless coverage extension, an essential requirement for modern SFN-based broadcast networks. The GPS-locked timing reference allows the DB9410-SFN to deliver deterministic delay, stable long-term synchronization, and highly reliable operation, even in complex multi-transmitter deployments.

Compact yet powerful, the DB9410-SFN fits seamlessly into any broadcast infrastructure. LED indicators on the front panel provide instant system status, while an intuitive HTML5-based web interface allows complete configuration and monitoring from any desktop or mobile browser. For added convenience and control flexibility, the device supports remote access via HTTPS, FTP, NMS, and SNMP protocols empowering engineers to manage systems from virtually anywhere.

Engineered with DEVA's hallmark attention to detail and reliability, the DB9410-SFN delivers pristine audio quality thanks to top-grade DAC components and precision signal processing. It supports both Digital AES192 and Analog MPX outputs, ensuring compatibility with a wide range of FM transmitters and studio setups. Whether deployed at a single transmission point or within a larger network, the DB9410-SFN guarantees low-latency, uninterrupted signal decoding across all environments.

The DB9410-SFN stands as a testament to DEVA's commitment to innovation and customer-driven design, offering an advanced, cost-effective solution for MPX over IP distribution. Its support for  $\mu$ MPX sets it apart as a future-ready decoder that meets the growing need for efficient, high-performance broadcast tools.

Choosing DEVA's DB9410-SFN means choosing reliability, flexibility, and the confidence that comes with decades of expertise in broadcast technology.

## DB9410-SFN PRODUCT FEATURES

- High quality FM MPX decoding function
- High end DAC converter for optimal quality
- Ultra low latency, all-digital DSP based design
- Remotely upgradable firmware to ensure improved operation
- Headphone audio output
- Very Intuitive Embedded WEB server for interactive supervision
- Full online remote control of all parameters via IP
- Configuration via web user interface for easy setup
- Optional Redundant 230V or 48V (DC) power supply
- Forward Error Correction to reduce bit errors in data stream
- USB flash drive for Audio Backup Storage
- SNMP v2c agent permitting full device management
- Apple and Android devices support
- SNTP for automatic synchronization of the built-in clock
- Protected access to the device settings
- LAN port for full TCP/IP remote control and monitoring
- Attractive price and very good price-performance ratio
- Proved and reliable hardware for 24/7/365 operating
- 1U Rack mountable Aluminum Case for high RF immunity
- Easy Installation and Setup

## DB9410-SFN TECHNICAL SPECIFICATIONS

<b>AUDIO DECODER</b>	
Codec	μMPX or raw PCM
Sample rates	192 kHz and 216 kHz, 24 bits
Signal Processing	24 Bit AD/DA conversion
<b>PCM</b>	
Bit depth	12 - 16, 20, 24 bit
FEC	RIST, ProMPEG FEC #3, release 2
Bandwidth	2.4 - 4.6 Mbps (no FEC)
<b>μMPX</b>	
Bitrates	320, 384, 448, 576, 800 kbit/s
FEC	μMPX FEC, RIST, Pro-MPEG FEC #3 release 2
Bandwidth	320 - 800 kbps (no FEC)
<b>ANALOG MPX OUTPUT</b>	
Connector	BNC
Type	Unbalanced
Level	+14 dBu (max. +16 dBu)
Sample rate	192 kHz and 216 kHz, 24 bits
Dynamic range	121 dB
<b>DIGITAL MPX AES192 OUTPUT</b>	
Connector	RJ-45, balanced, EMI suppressed
Standard	AES3
Sampling Rate	up to 192kHz, 24 bits

<b>GPS PORT</b>	
Connector	DB15, Male
Protocol	NMEA 0183, 9600bps
Sync	1 PPS, Square Wave, TTL Compatible
<b>FRONT PANEL</b>	
Status Indicators	4 LEDs
Headphones	1/8" (3.5mm) phones jack
USB	Type A for Backup audio player
<b>USER INTERFACE</b>	
SNMP	ver.2c, ver.3
Web interface	Full control and Status information
<b>NETWORK</b>	
Connector	RJ-45
Type	Ethernet, 1000Mbps
Device discovery	UPnP support
<b>OPERATING CONDITIONS</b>	
Temperature	-15°C to 55°C
Humidity	< 95%, non-condensing
Altitude	0 to 5000m above sea level
<b>POWER</b>	
Voltage	100-240V / 50-60 Hz
Power Consumption	12VA
Connector	IEC320, Fused and EMI-suppressed
<b>OPTIONAL REDUNDANT POWER SUPPLY</b>	
Option 1: 220V AC	90 - 260V AC (nominal 100 - 240V AC) 47 - 63 Hz (nominal 50 - 60 Hz)
Option 2: 48V DC	36 - 72V DC (nominal 48V DC)
<b>SIZE AND WEIGHT</b>	
Dimensions (W;H;D)	485 x 44 x 180 mm
Shipping Weight	540 x 115 x 300 mm / 2.673 kg

## Panel Indicators and Appointments

### FRONT PANEL




1. Phones Output
2. Power LED Indicator
3. LAN LED Indicator
4. Memory LED indicator
5. LINK LED indicator
6. USB port

## REAR PANEL



1. LAN Port / Internet Input – standard RJ-45 port
2. GPIO / GPS Port – DB15 HD, Male
3. AES 192 – RJ-45, Digital MPX Output
4. MPX – BNC, Analog MPX Output
5. Factory Defaults Reset button
6. Redundant Power Supply – 48V DC
7. Redundant Power Supply – 100-240V AC / 50-60 Hz
8. Mains connector – 110-240VAC / 50-60 Hz, IEC-320 C14 type
9. GND

## THE PINOUT OF A DB15 HD GPIO / GPS CONNECTOR

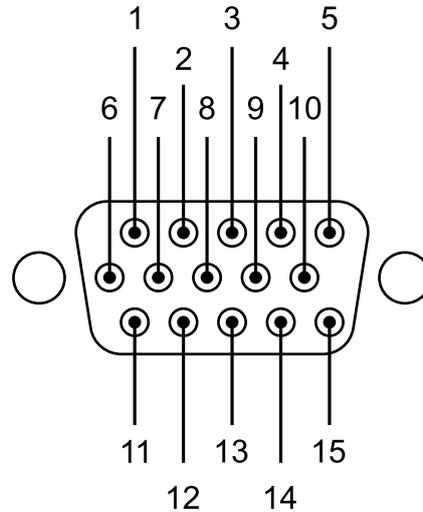

*DB15 HD, Male*

Pin	Function	Direction
1	GPI2	Opto isolated Input
2	GPS RX	GPS Communication Output
3	5V GPS	GPS +5V, Fuse protected (0.5A)
4	GPO3	Solid State Relay
5	GPO1	Solid State Relay
6	GPI3	Opto isolated Input
7	GPI1	Opto isolated Input
8	GPS TX	GPS Communication Input
9	PPS IN	GPS PPS (Pulse Per Second) Input
10	GPO2	Solid State Relay
11	GPICOM	Common GPO rail
12	GP5V	+5V (Out), Fuse protected (0.5A)
13	GPS GND	GPS Ground
14	GPGND	GPIO Ground
15	GPOCOM	Common GPO rail

## GPI EXAMPLE CONNECTIONS

To activate one Input, GPI pin would be pulled to ground , with a voltage applied on the GPICOM pin (Common to all GPI).

Using external power supply is the recommended method in order to avoid possible ground loops between equipment, as shown in Figure 1-1. The maximum allowed external power supply for logic control is 48 volts DC.

**NOTE** the presence of Current Limiting Resistors per GPI pin. The intention is to limit the current to 20mA for each GPI pin. Use the table below to choose the suitable Resistor's value.

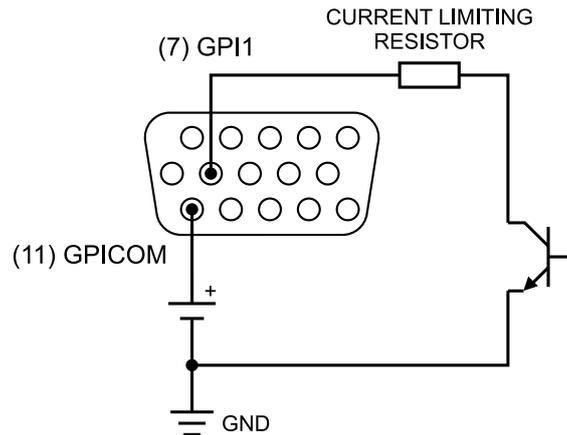


Figure 1-1 - External Power Supply

If the equipment being controlled is electrically isolated, then the use of the GPIO port's power supply is acceptable. The easiest way is shown on Figure 1-2.

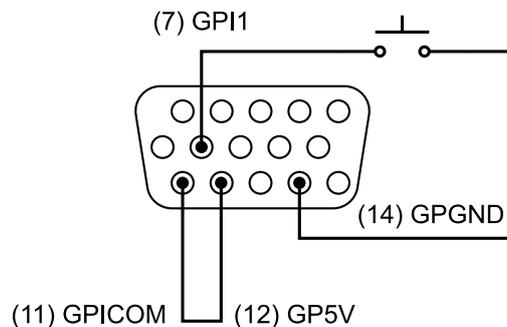


Figure 1-2 - GPIO Port's Power Supply

**CAUTION:** The use of current limiting resistor per GPI pin is required for some voltages, see table (each input has an internal 330ohms protection).

**NOT PROTECTING THE GPI COULD DAMAGE YOUR DEVICE.**

VDC	External Resistor
5	0
6	0
12	680 / 0.25Watt
24	1.8k / 0.5Watt
48	3.9k / 1Watt

## GPO EXAMPLE CONNECTIONS

The GPO portion of the GPIO port are Solid State Relays. Current should be limited to 100 mA per GPO pin of a port. Maximum allowed voltage is 48 volts. The following diagram shows the recommended connections for outputs with the use of an external power supply.

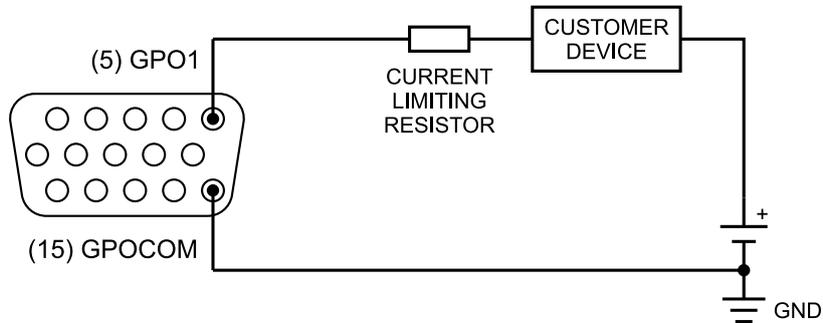


Figure 2-1 - External Power Supply

If necessary, a Current Limiting Resistors must be used to limit the current to 100mA for each GPO pin.

### **NOT PROTECTING THE GPO COULD DAMAGE YOUR DEVICE.**

If the device being controlled is electrically isolated, than the internal GP5V supply can be used, maintaining a 100mA limit on current drawn.

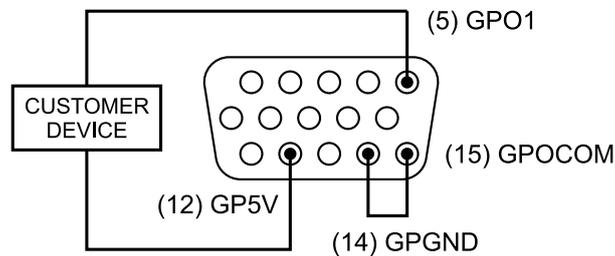


Figure 2-2 - GPIO Port's Power Supply

**NOTE:** GPO pins and GPOCOM are not polarized, current can flow both directions.

## INTERNAL CONNECTIONS OF THE GPIO PORT

GPIO port provides 3 GPI (opto isolated inputs) and 3 GPO (solid state relays). Port is capable of driving a combined current of 100mA. Each GPI pin should be limited to 20mA of current.

Figure 3 shows a simplified diagram of the internal wiring behind the connector. The EMI Filters' parts are omitted for the sake of simplicity.

All of the inputs and all of the outputs on the GPIO port are grouped together. The 3 GPO outputs are on 3 separate output pins, but they share the same "Common Return" connection GPOCOM on pin 15. Similarly, the 3 GPI input pins share one high-side rail GPICOM, connected to pin 11.


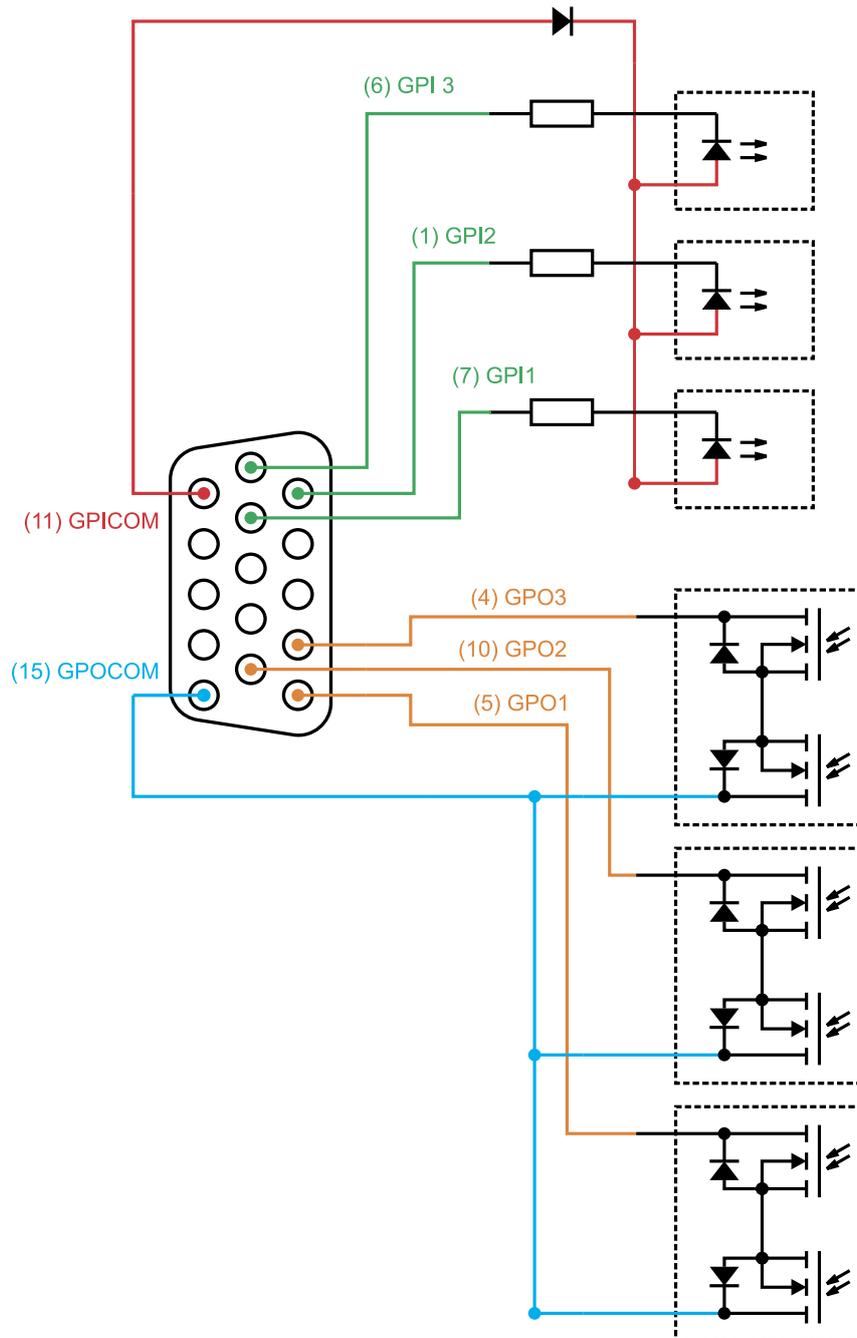


Figure 3

## Block diagram

A simplified block diagram of DB9410-RX / DB9410-SFN is shown below:

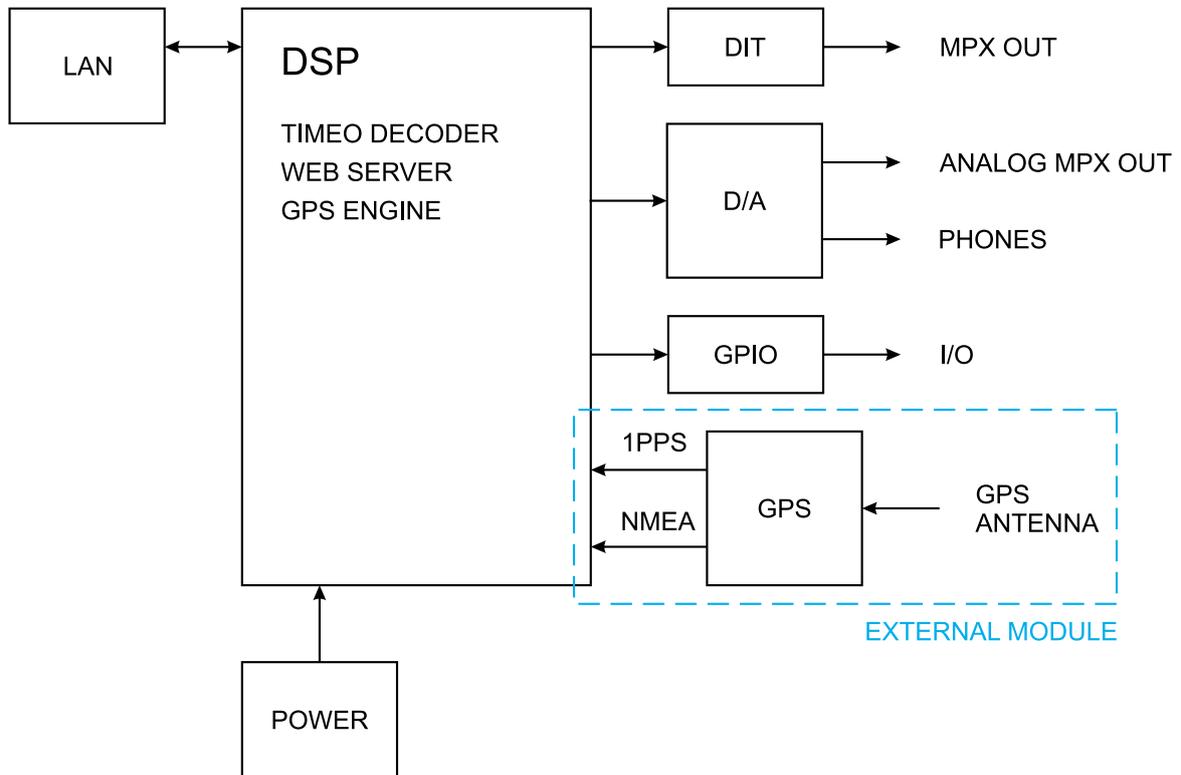

**NO USER-SERVICEABLE COMPONENTS INSIDE.  
REFER ALL SERVICING TO QUALIFIED TECHNICAL PERSONNEL**

## Safety Warning

### **ALWAYS OBSERVE THE SAFETY PRECAUTIONS.**

Careful observance of the safety precautions will help prevent physical injury, damage of the equipment, and extend the equipment life.

- The servicing of electronic equipment should be performed only by qualified personnel;
- Before removing the covers the unit must be switched off and the mains cable unplugged;
- When the equipment is open, the power supply capacitors should be discharged using a suitable resistor;
- Never touch the wires or the electrical circuits;
- Use insulated tools only;
- Never touch the metal semiconductor. They might carry high voltages;
- For removing and installing electronic components, follow the recommendations for handling MOS components.
- Do not remove the factory sticker from the equipment. It contains information as regards the name, serial number and MAC address of the device.
- To join the equipment to the mains supply, use the power cord purchased with the equipment.

**ATTENTION:** The device has an internal Lithium battery. Do not try to re-charge this battery! In case the battery needs to be changed, please contact us for detailed instructions and information of the battery type.

## Operating Recommendations

To ensure normal operation of the DEVA unit, we recommend following the instructions listed below.

- Install the unit in places with good air conditioning. The unit is designed to operate within the ambient temperature range of 10 to 50°C. The equipment rack should be ventilated in order for the device to keep its internal temperature below the maximum ambient temperatures;
- We do not recommend installation in rooms with high humidity, dusty places or other aggressive conditions;
- Although the device is intended to be installed closed to exciters or transmitters, we do recommend the device to be located away from abnormally high RF fields.
- Use only checked power supply cables. We strongly recommend the usage of shielded cables;
- Connect the DEVA unit to reliable power supply sources only. In case of unstable power supply, please use Uninterruptible Power Supply (UPS);
- Use the device only with its top cover on to avoid electromagnetic anomalies. Otherwise, this may cause problems with the normal functionality of the unit;
- To ensure normal remote operation of the unit, make sure to connect the device to a good quality Internet connection;
- For the normal operation of your DEVA device, check if the network settings past through all the required data traffic.

## Unpacking and inspection

Upon receipt, the equipment should be inspected for possible shipping damages. If such are found or suspected, notify the carrier at once and contact DEVA Broadcast Ltd. The original shipping carton box and packing materials should be kept for possible reuse, in case of return for Warranty repair, for example. Shipping damages as a result of improper packing for return may invalidate the Warranty!

**The packing material (plastic bags, polystyrene, nails, etc.) must never be left within reach of children, as these items are potential sources of danger.**

**IT IS VERY IMPORTANT** that the [“Product Registration Card”](#) included in the Manual be completed accurately and returned. This will assure coverage of the terms of the Warranty and it will provide a means of trace in case of lost or stolen equipment. In addition, the user will automatically receive SERVICE OR MODIFICATION INSTRUCTIONS from DEVA Broadcast Ltd.

## Mounting

### **RACK REQUIREMENTS 1U**

---

The unit mounts in a standard 19-inch equipment rack and requires only 1 $\frac{3}{4}$  inches (1U) of vertical rack space. In order the painted finish around the mounting holes to be protected, the use of plastic washers is recommended.

### **RACK REQUIREMENTS COMPACT UNITS**

---

Our customized 1U 19-inch rack accessory provides a professional mounting option for up to three compact size DEVA units. It is made of milled aluminum and finished in black powder coat. Two extra blanking panels and set of mounting screws are provided with each rack bracket kit.

### **STAND-ALONE DEVICES**

---

DEVA's stand-alone units (Radio Explorer series, BandScanner series, DVB Explorer) do not require additional tools or installation brackets.

## Overview

MicroMPX or  $\mu$ MPX is a codec that transfers a full FM composite or MPX signal, meaning audio plus stereo pilot and RDS, over a low bitrate connection. It currently supports bitrates from 320 upto 800 kbit/s, and bitrates down to 176 kbit/s if you're using MicroMPX+ mode.

MicroMPX was developed specifically for use on FM, and even though the bitrates are low, it does not introduce typical lossy compression artifacts such as pre- and postringing or watery sounds. It also maintains peak control. If you use a composite clipper, the extra loudness that composite clipping generates also survives the MicroMPX codec. So for all relevant purposes, there's no real difference between connecting the direct composite output of a processor to the FM transmitter and connecting the MicroMPX decoder output to that same transmitter. (It is a lossy codec so the signal is not identical, which can become relevant when using a Single Frequency Network – more about that later.)

MicroMPX only needs one-way communication (from the encoder to the decoder, typically from the studio site to the transmitter site). This means that it can be sent over connections such as satellite links. It has several redundancy mechanisms to handle network or IP link problems: it can add recovery data to recover lost packets and send the same data over multiple connections so that as long as one of the connections works, the signal keeps playing. It is also possible to use multiple encoders that send their data to one decoder, to handle problems on the encoder end.

One encoder can feed any number of decoders (depending on the available bandwidth), and network multicasting or broadcasting is possible.

With MicroMPX, you can encode the full MPX signal in one location, and just spread it from there to all your transmitters, which will all get the same signal at the same time.

**WARNING:** Sending MicroMPX over an unreliable connection such as the public internet may work perfectly fine, but it can also cause dropouts. If possible, use a reliable connection, or redundant connections.

# Getting Started

The DB9410 series are provided with preliminary settled  $\mu$ MPX licenses.

In order for the normal operation of the DB9410 to be guaranteed, you will need fulfill the following conditions:

1. Standard Ethernet 10/100M connection;
2. Correctly assigned Network configuration and device settings.

To make sure that all the conditions are fulfilled please, follow the instructions below.

## CONNECTION

---

1. Install the unit on its operation place;
2. Using the provided power cable, connect the unit to the power supply network;
3. Connect the antenna cable to the RF antenna input connector located on the rear panel of the device;
4. Connect the DB9410 to the TCP/IP network using direct network cable.

## NETWORK SETTINGS

---

After connecting the network cable the Led 'LAN' located on the rear panel must be ON or flashing. The next and most important step for configuration is the adjustment procedure of the Network Communication. The settings shown below are Default Network Settings:

DHCP	Enabled
IP	Assigned by DHCP
Mask	Assigned by DHCP
Gateway	Assigned by DHCP
DNS	Assigned by DHCP
HTTP Port	80

## NETWORK DISCOVERY

---

This is a network setting that defines whether your computer can see (find) other computers and devices on the network and whether other computers on the network can see your computer. By default, Windows Firewall blocks network discovery but you can enable it.

1. Open Advanced sharing settings by clicking the Start button, and then on "Control Panel". In the search box, type "network", click "Network and Sharing Center", and then, in the left pane click "Change advanced sharing settings";
2. Select your current network profile;
3. Click "Turn on network discovery", and then click save changes.

**NOTE:** If you're prompted for an administrator password or confirmation, type the password, provide confirmation or contact your system administrator.

If you have already enabled this function on your computer DB9410 will be automatically added to the Device list section. The device will be ready for usage and no additional adjustments will be required except user name and password.

**NOTE:** If the port is different than the default one (80), it is necessary to specify it, for example:  
http://192.168.1.2:9000

**ATTENTION:** Depending on Internet Protocol Settings, the assigned IP address may not be visible outside your local network, thus the device may be accessed only within that network. Consult with your network administrator for the appropriate IP settings.

## **NETWORK SECURITY RECOMMENDATIONS**

---

1. It is not recommended the DB9410 to be directly connected to the Internet. This may lead to unregulated access and/or problematic operation of the device. To ensure secure connection, we recommend the device to be installed behind a router with an active firewall.
2. If remote access to the device is needed, we recommend using VPN to the router or the port of the relevant service (WEB, SNMP, Application, etc.) to be properly NAT forwarded.
3. If NAT forward is used, it is highly recommended random ports of your choice to be used. Not the standard ones (80 for WEB, 161 for SNMP, etc.).
4. Using DMZ connection is not recommended.
5. Make sure to change the standard access credentials (usernames and passwords, SNMP communities).

For detailed information as regards the recommendations listed above or need of further instructions, please contact your network administrator.

## **LAN PORT**

---

For normal operation it is necessary the device to be connected to a local network or Internet by cable with RJ-45 connector.

# Network Discovery

## DEVA ETHERNET SETUP TOOL

---

The DEVA Ethernet Setup Tool is designed to detect and configure networked DEVA products that lack front-panel IP configuration or UPnP support. It simplifies network setup by identifying the device's current IP address and allowing changes.

Once the device is connected to a local network or to the Internet by the applied LAN cable, download and install the DEVA Ethernet Setup Tool.

## DOWNLOAD LATEST VERSION

---

The latest version of DEVA Ethernet Setup Software can be found on our website: <http://www.devabroadcast.com/downloads>


**IMPORTANT:** This software requires the installation of third-party software called WinPcap (<https://winpcap.org>) if it is not installed already.

## USING THE TOOL


---

In order for the tool to be able to find the device during the network scan, please make sure that the unit is connected to the power supply chain and Ethernet network. Then, open the DEVA Ethernet Setup Tool and follow the instructions listed below:


1. Once the program window opens, an automatic network scan process will be started.

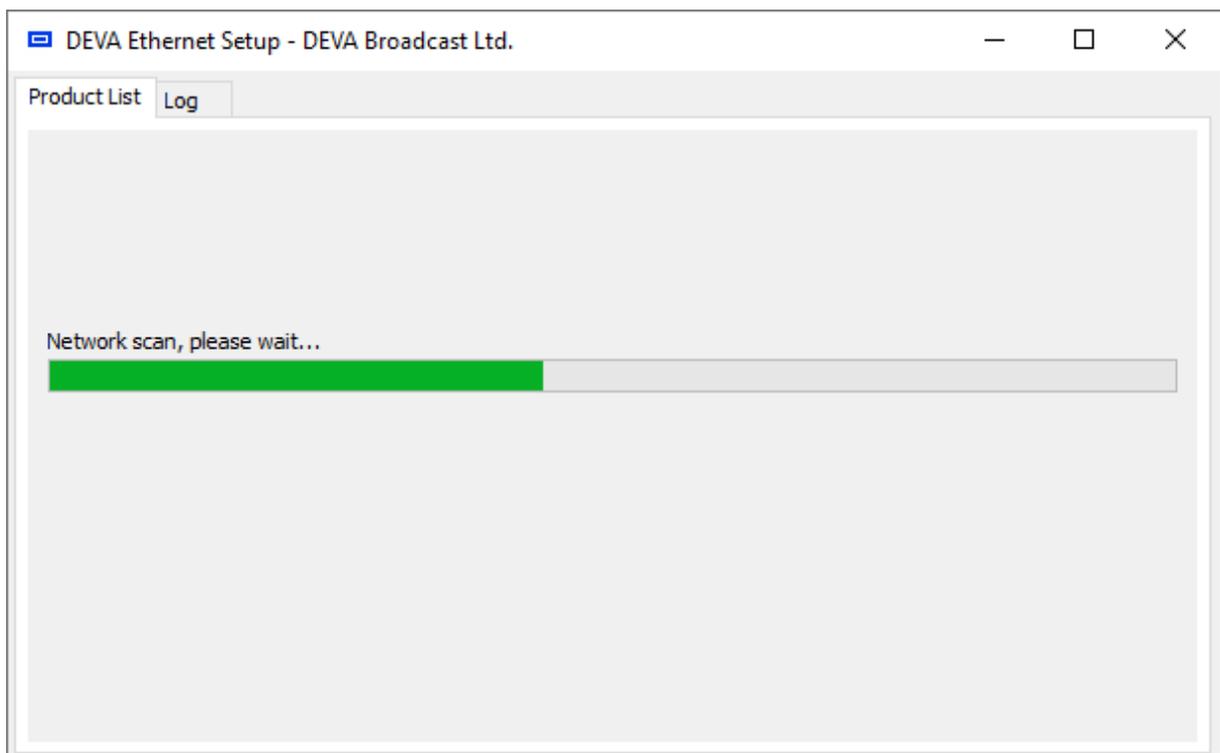


2. Once the network scanning process is completed, the collected data will be depicted in section Product List:

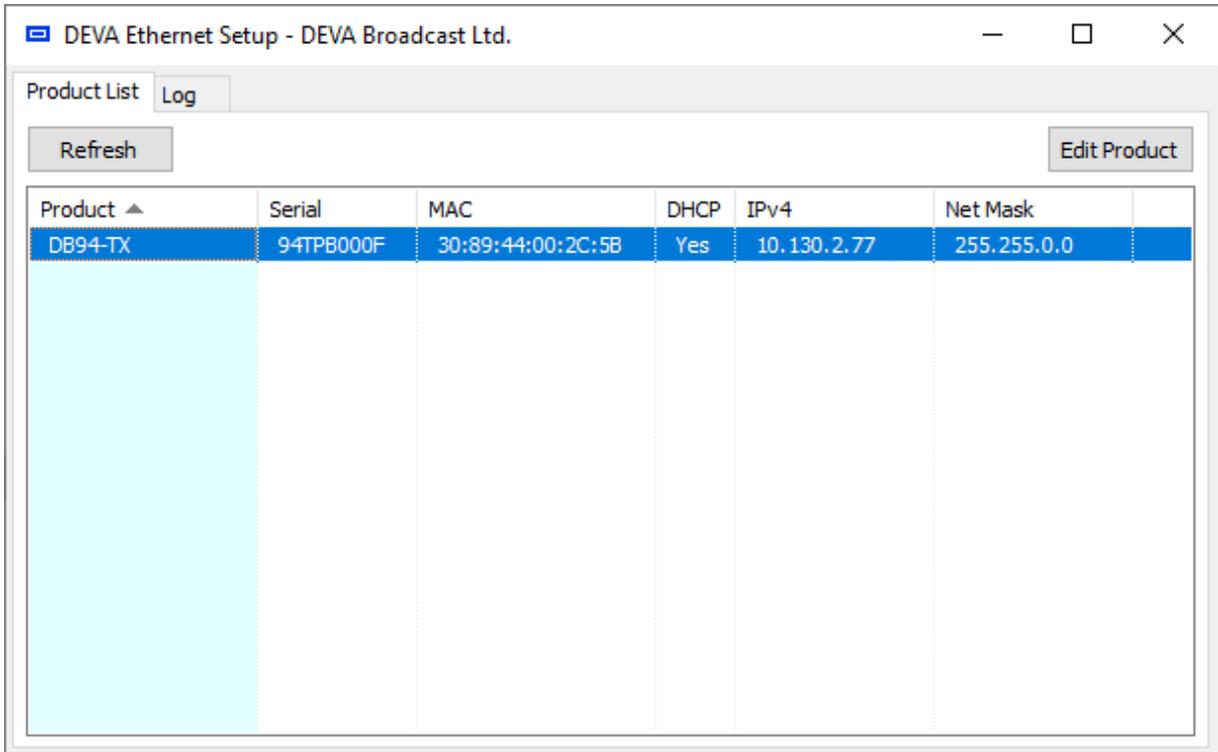

3. To change the parameters, select the product and press [Edit Product]. A new window will appear:

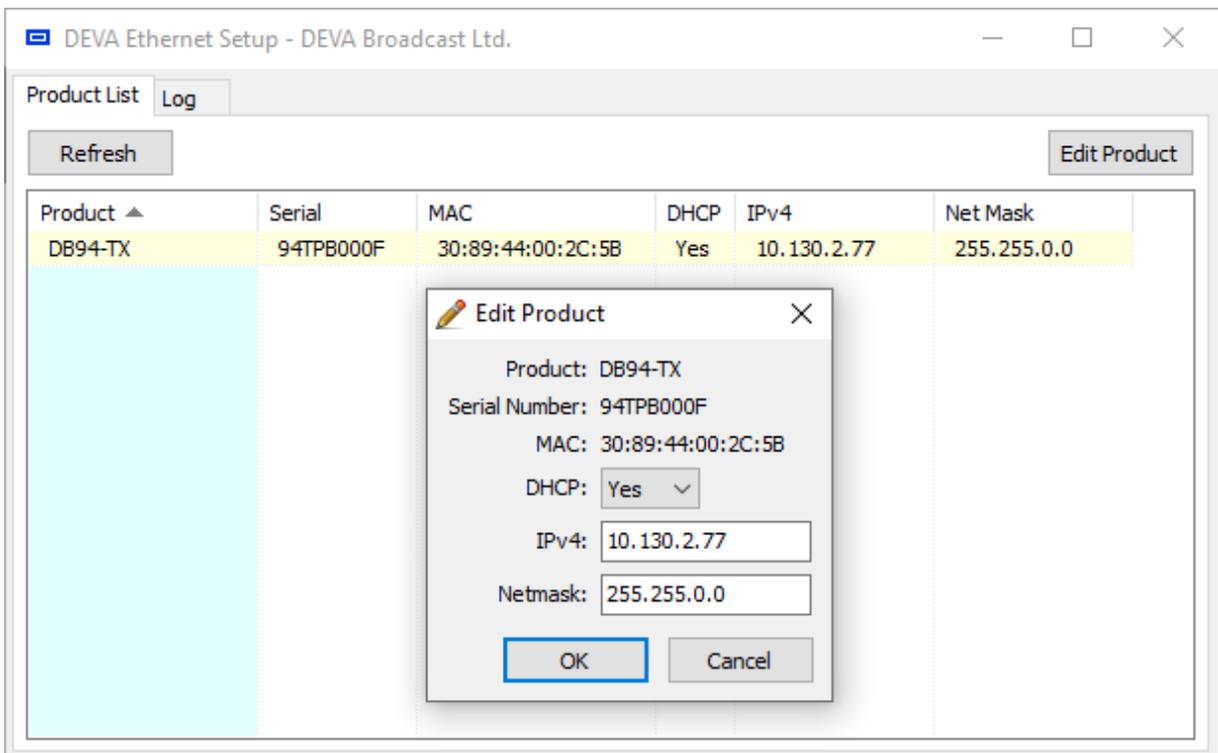

4. Enter the needed changes and press [OK]. Make sure to write down the IP address as it will be needed in order for the device to be accessed via WEB or Software interfaces.

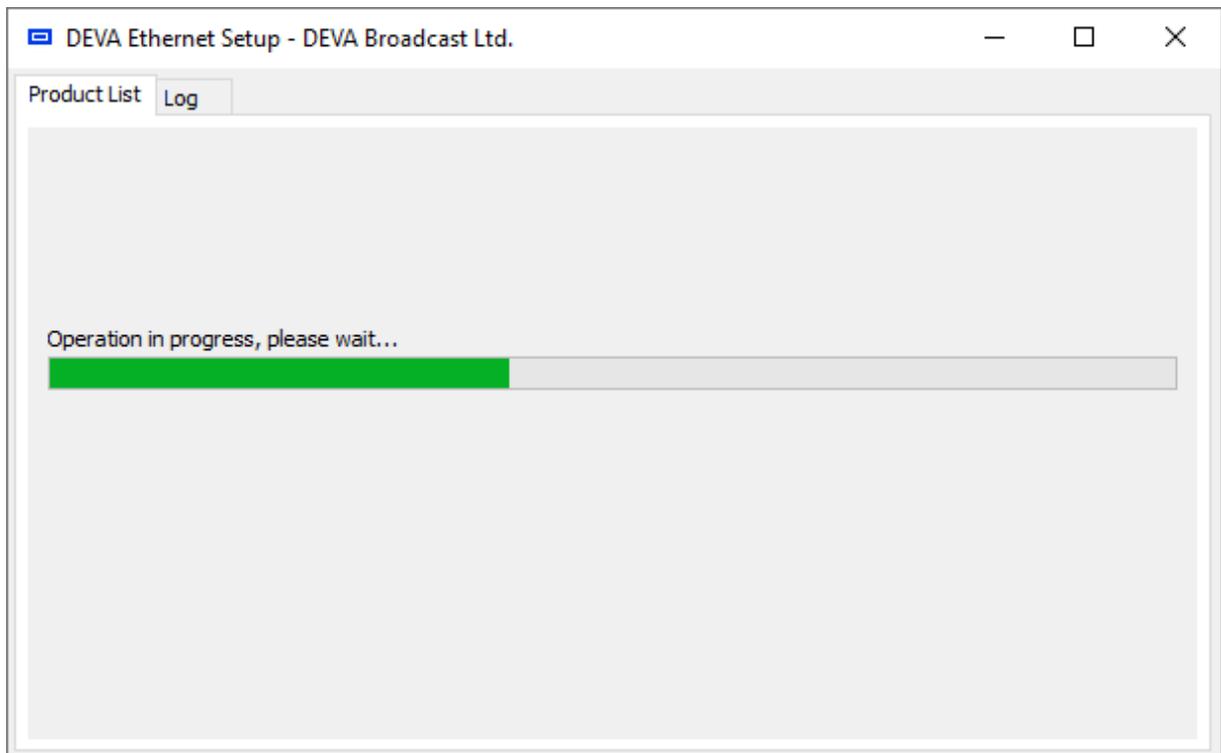

5. A new network scan process will be performed automatically to confirm that the applied settings are accepted.

*If you are experiencing any difficulties, or due to any reason the setup process fails, please contact us at [support@devabroadcast.com](mailto:support@devabroadcast.com).*

# MicroMPX Decoder Configuration

## CONNECTING TO A FM TRANSMITTER & CALIBRATING

How to connect the decoder to the transmitter depends on several things. If the transmitter has a digital MPX input (MPX over AES/EBU), that is the preferred way of connecting it. And most of the steps below can be skipped in that case.

For analog MPX connections, transmitters typically provide either an XLR MPX input or a BNC MPX input. The DB9410 provides an unbalanced MPX output, therefore it must be connected to the transmitter's unbalanced BNC MPX input.

After connecting it, you need to adjust the level such that the output of the transmitter complies to your local laws (75 kHz modulation – or sometimes a bit more, mainly). MicroMPX has a test tone generator, both for sine waves that can be used to setup the level and if needed boost the high frequencies a bit if there is some high frequency rolloff, and a square wave generator that can be used to compensate for tilt in low frequencies, typically caused by a highpass filter (DC removing filter) in many sound cards, and sometimes even in older transmitters.

**Step 1:** Select an approx. 1000 Hz tone, and adjust the level (either the MicroMPX output level or the transmitter input gain) to match the maximum allowed modulation.

**Step 2:** Switch to a 30 Hz or so square wave, and adjust the RC slider until the modulation is as close as possible to that same maximum level. Go down to 15 or 10 Hz to adjust it more accurately. Normally, you should be within at most 1-2 kHz of the allowed maximum once this is done, more than that indicates some issue.

**Step 3:** Check how much the level drops at for example 50 or 60 kHz. And adjust the Highs RC slider – CAREFULLY because it's very easy to overdo it. Having too little highs causes no real problems except some loss in stereo separation and RDS level, but having too much can cause overshoots.

**IMPORTANT:** when using the tilt correction or Highs RC correction in the MicroMPX decoder, its output level MUST be set below 0dB, or digital clipping could occur. Check the waveform display to make sure the waveform never exceeds the lines on top and bottom.

## About the MicroMPX Codec

The DB9410 supports MicroMPX, a custom-developed audio codec created specifically for FM broadcasting. It enables the transmission of high-quality FM multiplex signals over IP using UDP while requiring only 320 kbps of bandwidth. In contrast, some manufacturers offer full-bandwidth, uncompressed MPX over IP solutions, but these demand significantly more dedicated capacity—often 2 Mbps or higher.

By comparison, MicroMPX reduces the required bandwidth by nearly 84%, bringing it down to just 320 kbps. This dramatic reduction makes it practical and cost-effective to send high-quality multiplexed audio from virtually any audio processor over an IP network directly to an exciter.

Unlike conventional codecs such as MP3 or AAC, which are optimized for stereo audio, MicroMPX is engineered specifically for composite FM signals. It uses an innovative perceptual masking technique that takes advantage of the inherent characteristics of FM multiplex signals. When used for STL applications, this design offers two key advantages over traditional stereo codecs:

- Artifacts generated by stereo codecs typically require additional downstream processing to correct overshoots and other issues before stereo generation.
- Any artifacts produced by MicroMPX encoding appear as normal FM noise and are effectively imperceptible.

With MicroMPX, broadcasters can now carry MPX signals over lower-bandwidth IP links and narrowband STL paths. This technology opens up new possibilities for audio distribution while reducing both equipment requirements and overall costs by capitalizing on the continued expansion of global IP infrastructure. Sound quality also improves as this specialized codec is deployed more widely. As with any transformative technology, the range of applications for MicroMPX is expected to expand as innovative broadcast engineers explore its capabilities.

## A DISTINCTION FROM L/R SIGNALS

---

It is essential for readers to recognize that the DB9410 carries fully modulated FM composite signals rather than discrete left and right audio channels. This composite signal includes all elements required for an FM broadcast, including the L+R program audio, the 19 kHz stereo pilot tone, the L-R stereo information, and RDS/RBDS data on the first subcarrier.

When operating as an encoder, the DB9410 converts an analog composite FM signal into IP data packets. In decoder mode, it performs the reverse function, transforming IP packets back into an analog composite FM signal. Consequently, the encoder must be connected to the output of an audio processor, while the decoder is designed to drive the analog composite input of an FM transmitter.


In practical terms, DB9410 functions much like a modem for FM broadcasts. For clarity, referring to an FM composite signal diagram can be helpful.

## Use Cases & Applications

The diagrams depicted below represent only a few samples of the applications made possible by this modular technology. By using the DB9410, transmitter rack layouts can be simplified, removing the need for additional processing or stereo generation at the transmitter site.

### SIMPLE STL: USE WITH ANY FM PROCESSOR

The DB9410 is processor agnostic. Composite output of ANY brand of FM processor feeds an MPX Encoder, while the Decoder feeds the transmitter .

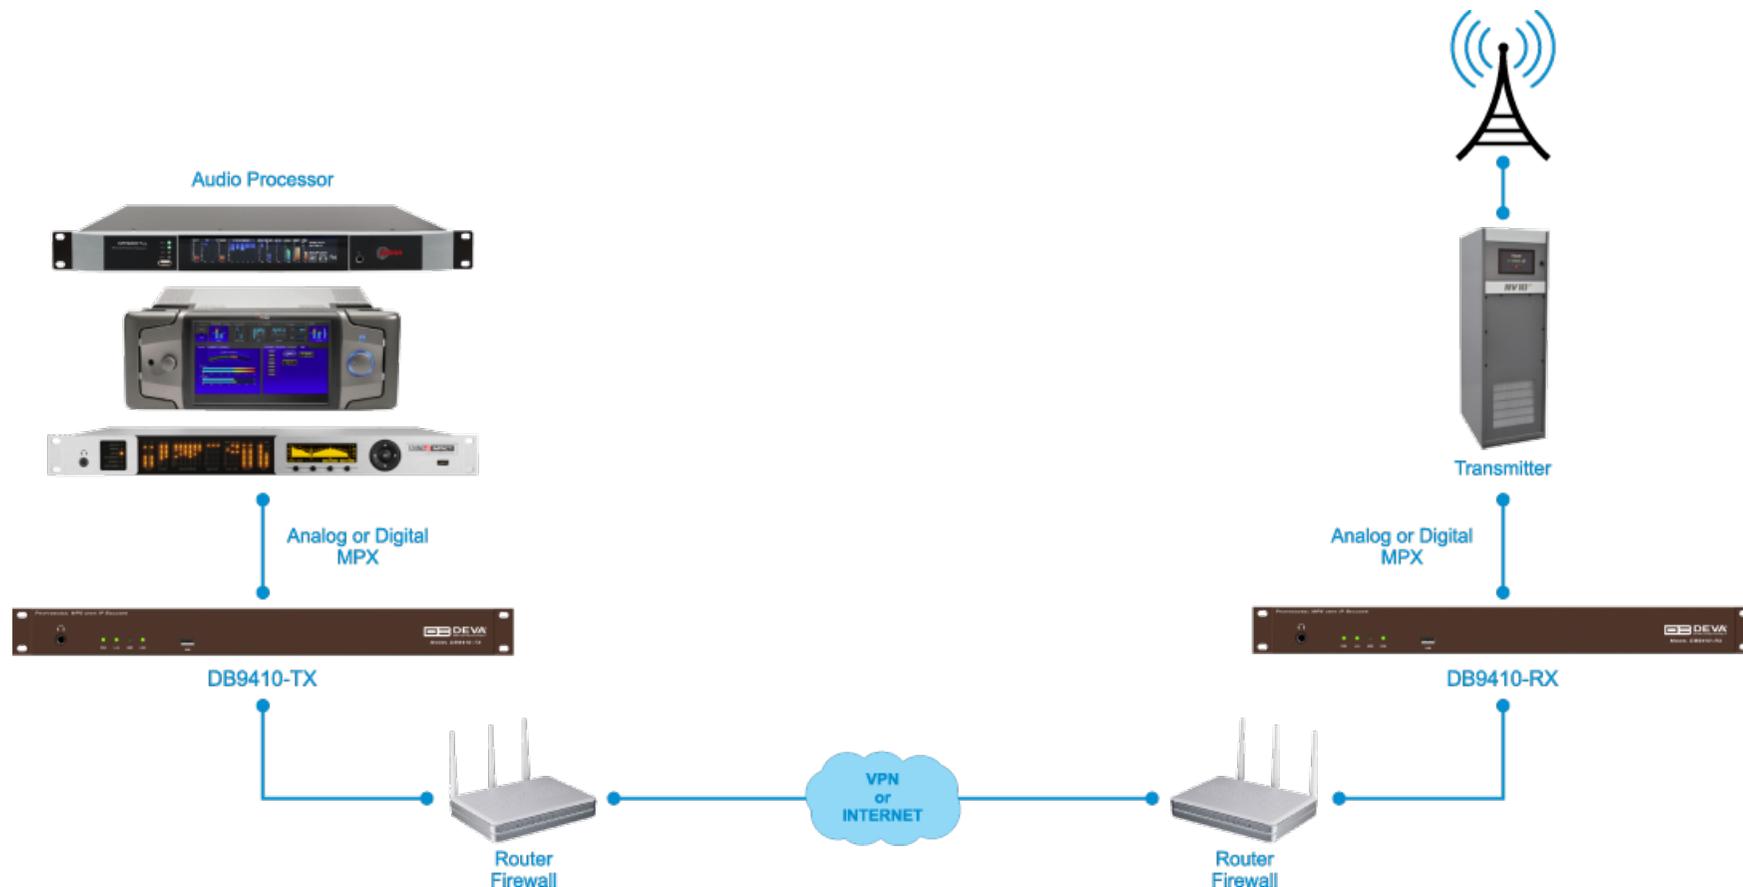


## ONE PROCESSOR TO MANY TRANSMITTERS

This diagram highlights one of the key advantages of transporting MPX over IP: every decoder produces an identical replica of the primary processor output.


Whether at the main transmitter, backup facility, or repeater site, each location receives the same signal.

This approach maximizes the benefit of your highest-quality processor, ensures consistent sound across all transmission sites, and eliminates the need for individual tuning and adjustment of each transmission chain.

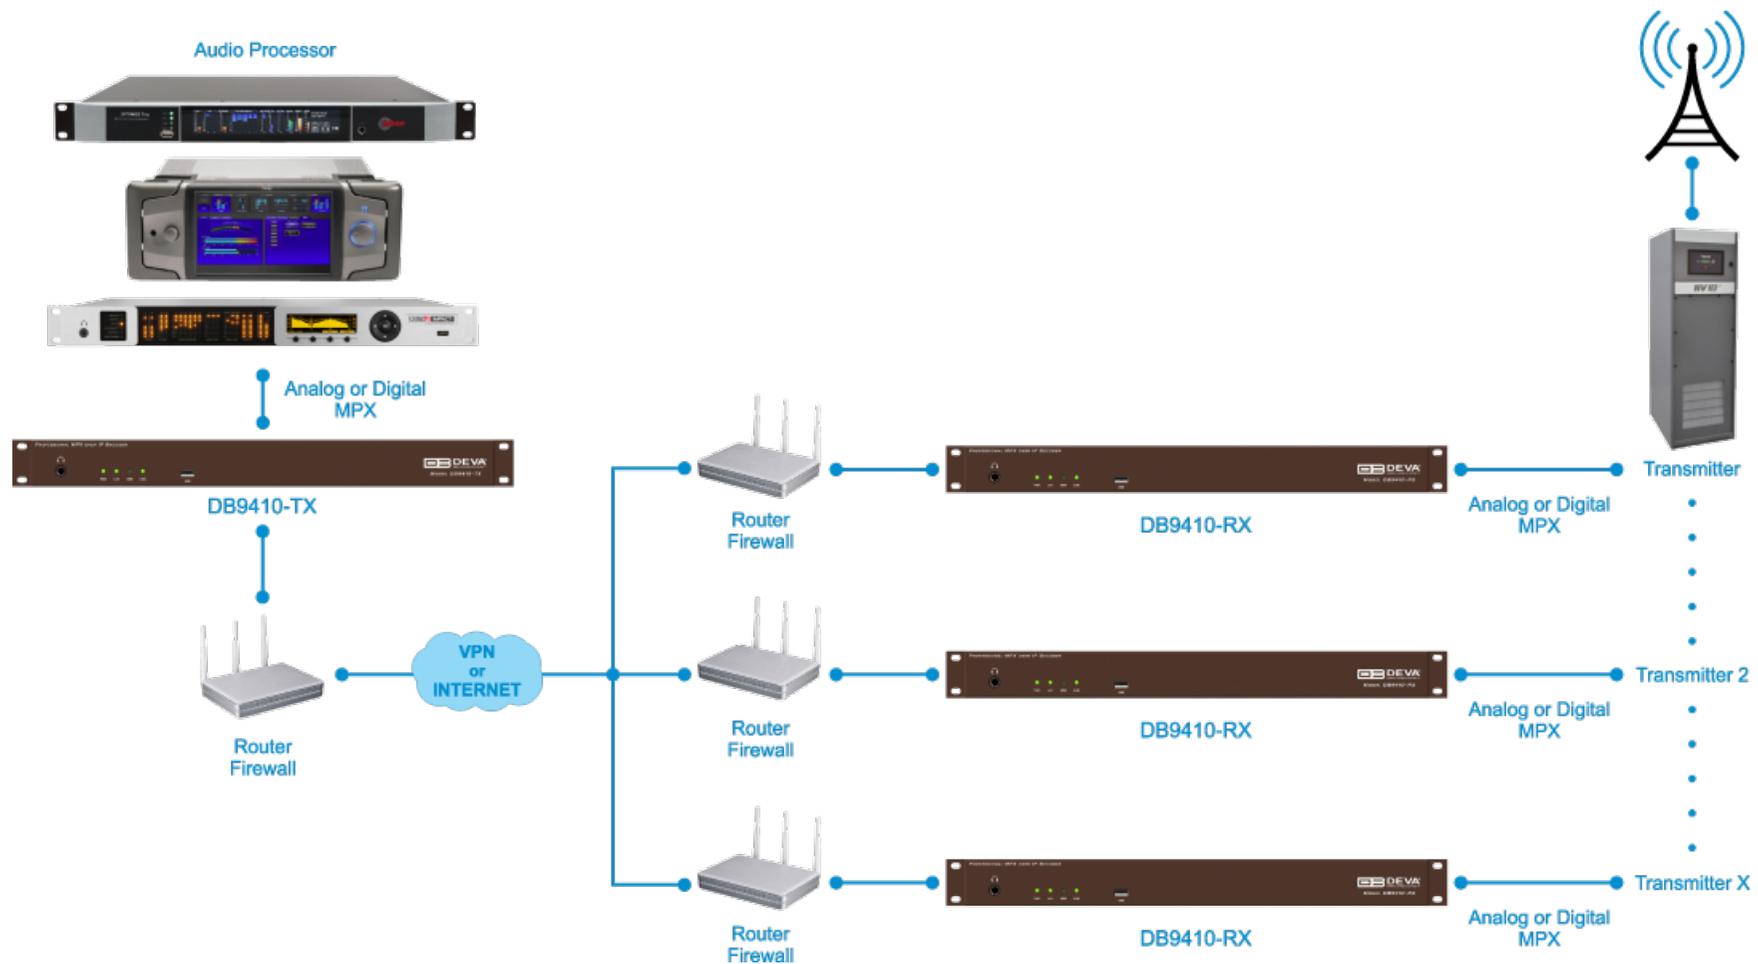

## USE WITH PRIVATE NETWORKS AND IP RADIOS


MicroMPX allows lower bandwidth IP connections and narrow band STL channels to be used for MPX signals transport.

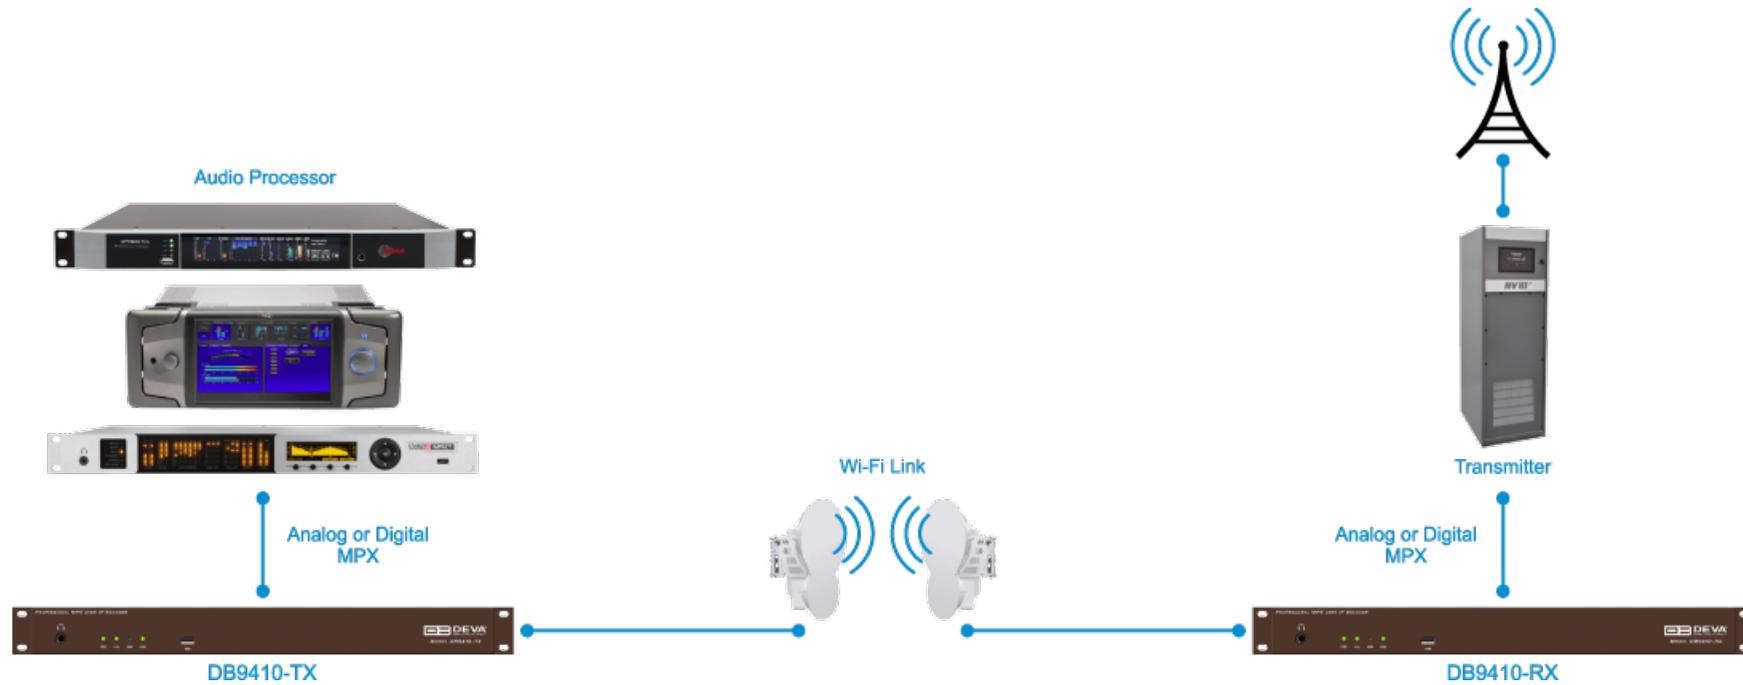

## REDUNDANT PATHS AND BACKUP SCENARIOS


### Single Encoder & Decoder, Dual Networks

In this configuration, Network 1 and Network 2 ports feed two entirely separate network paths. If packets are lost on one path, the Decoder grabs them from the other and seamlessly re-assembles the stream.

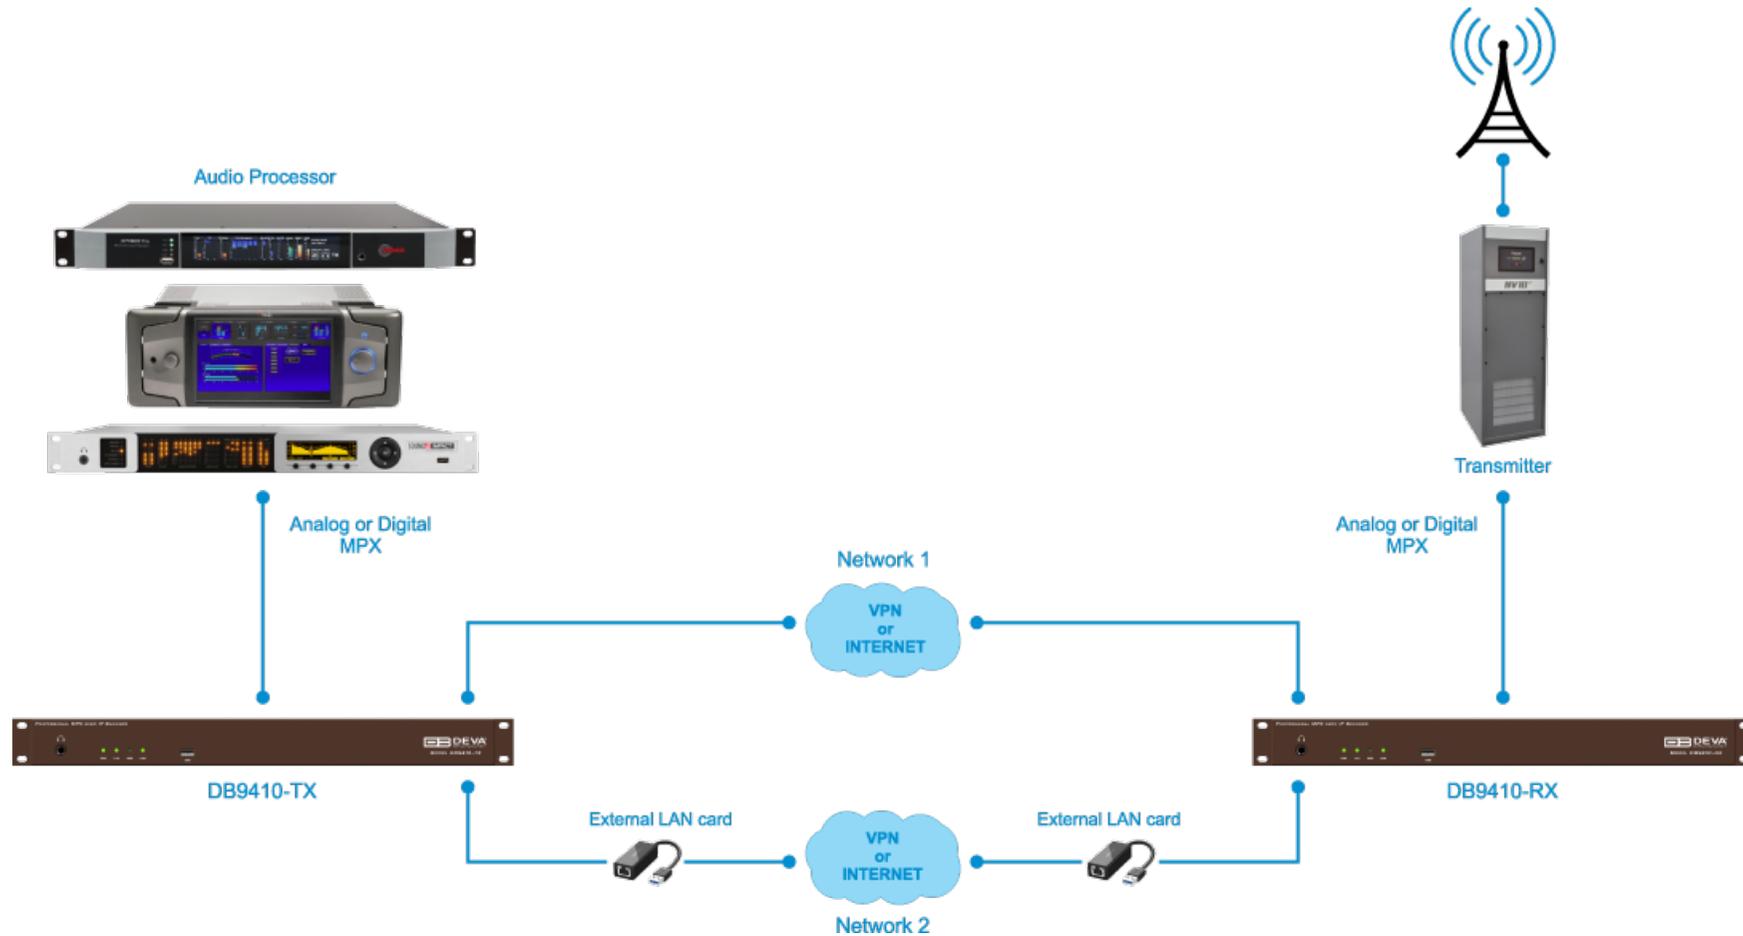


## Dual Encoder, Single Decoder

A processor (or 2 processors located at different sites) feeds two Encoders. Both Encoders send the same signal over UDP to a single Decoder at the same IP and port address. If one of the links fails, the Decoder picks up the stream from the other Encoder after a brief failover period. (An external router may be required, depending on your link design).

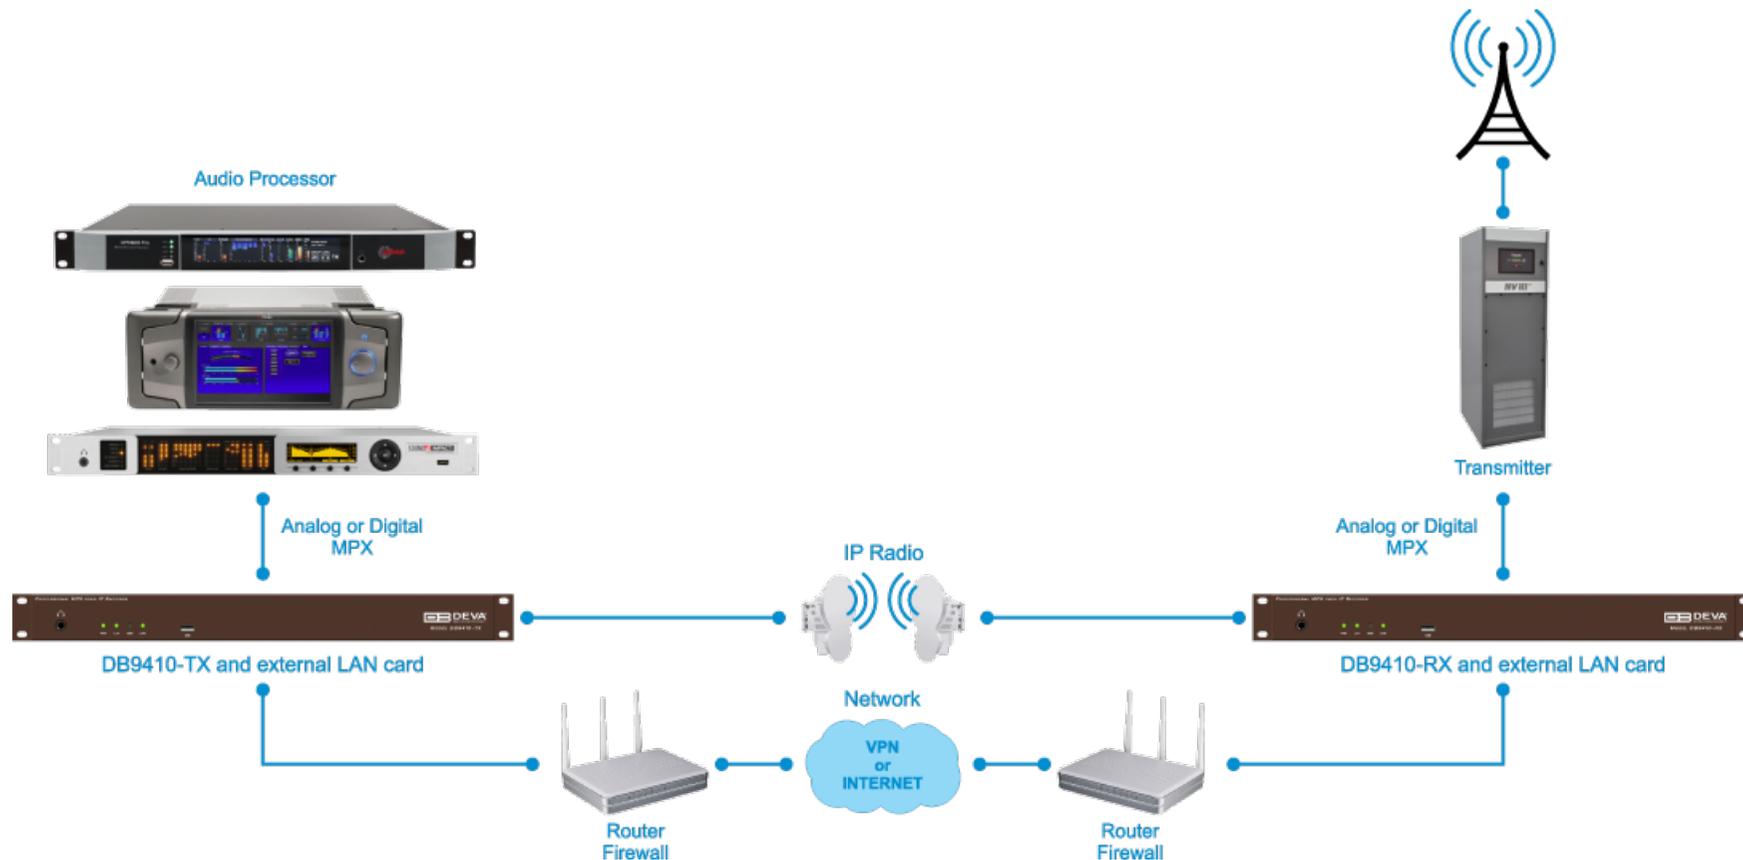

## Dual Encoder, Dual Decoder

In this option, a second Decoder is added to the previous usage diagram so that both - the Main and Backup transmitters are both fed with signals served by separate network paths. (Depending on your link design, an external router may be required).

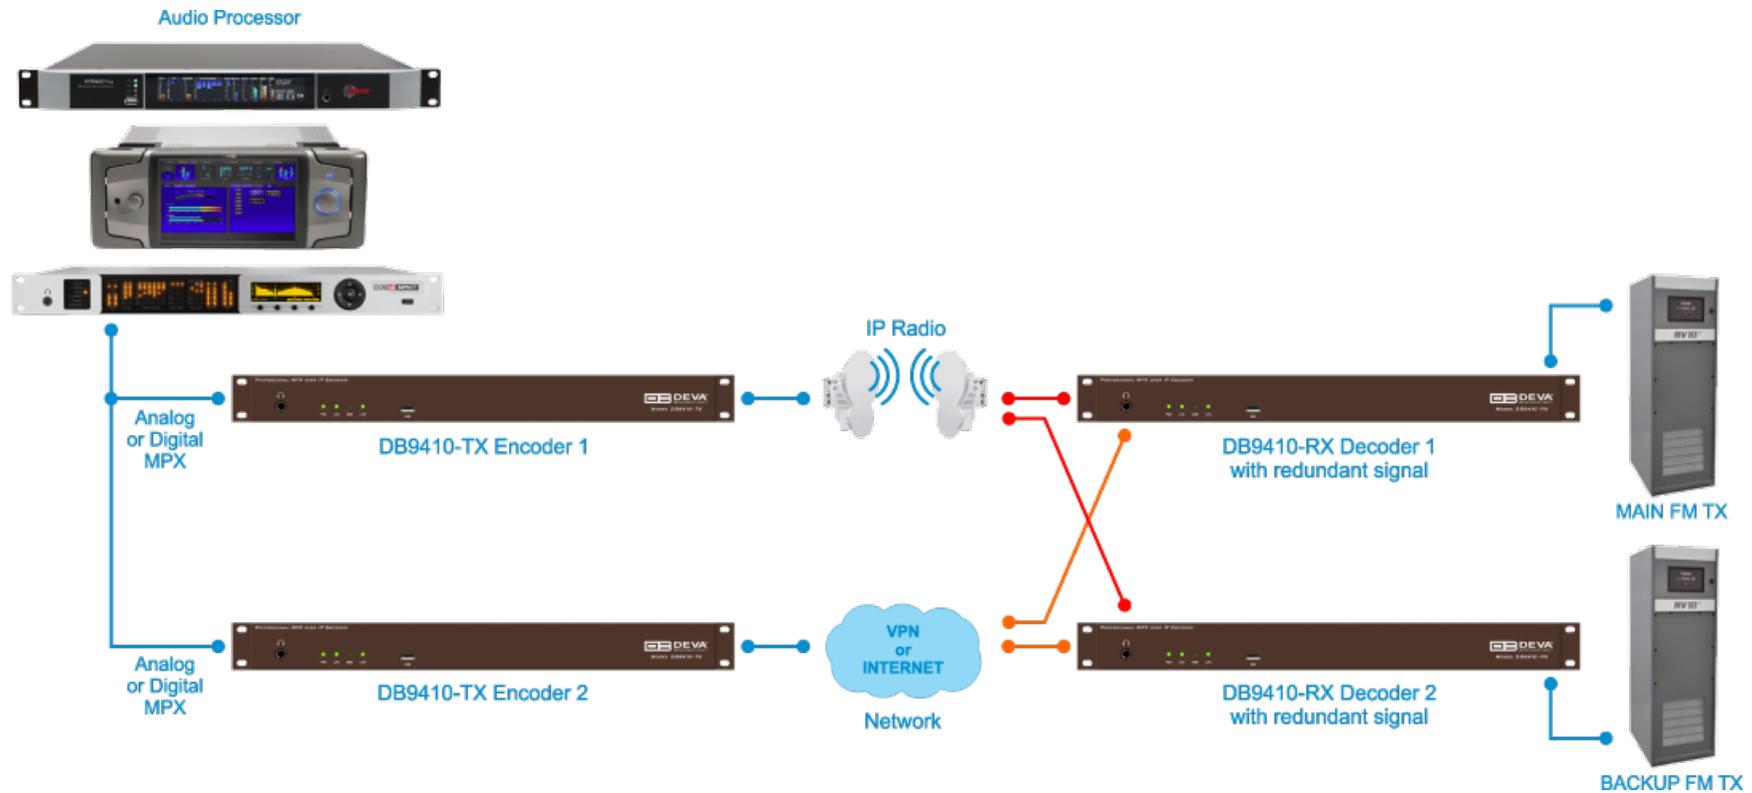


## SFN + GPS

Connect the GPS receiver to the encoder's GPIO/GPS port. In general, any GPS receiver capable of sending an NMEA signal to the device's COM port should work.

Place the GPS receiver in a location where it can receive a strong GPS signal, such as near a window.

Each decoder requires a GPS receiver with PPS (Pulse Per Second) support.

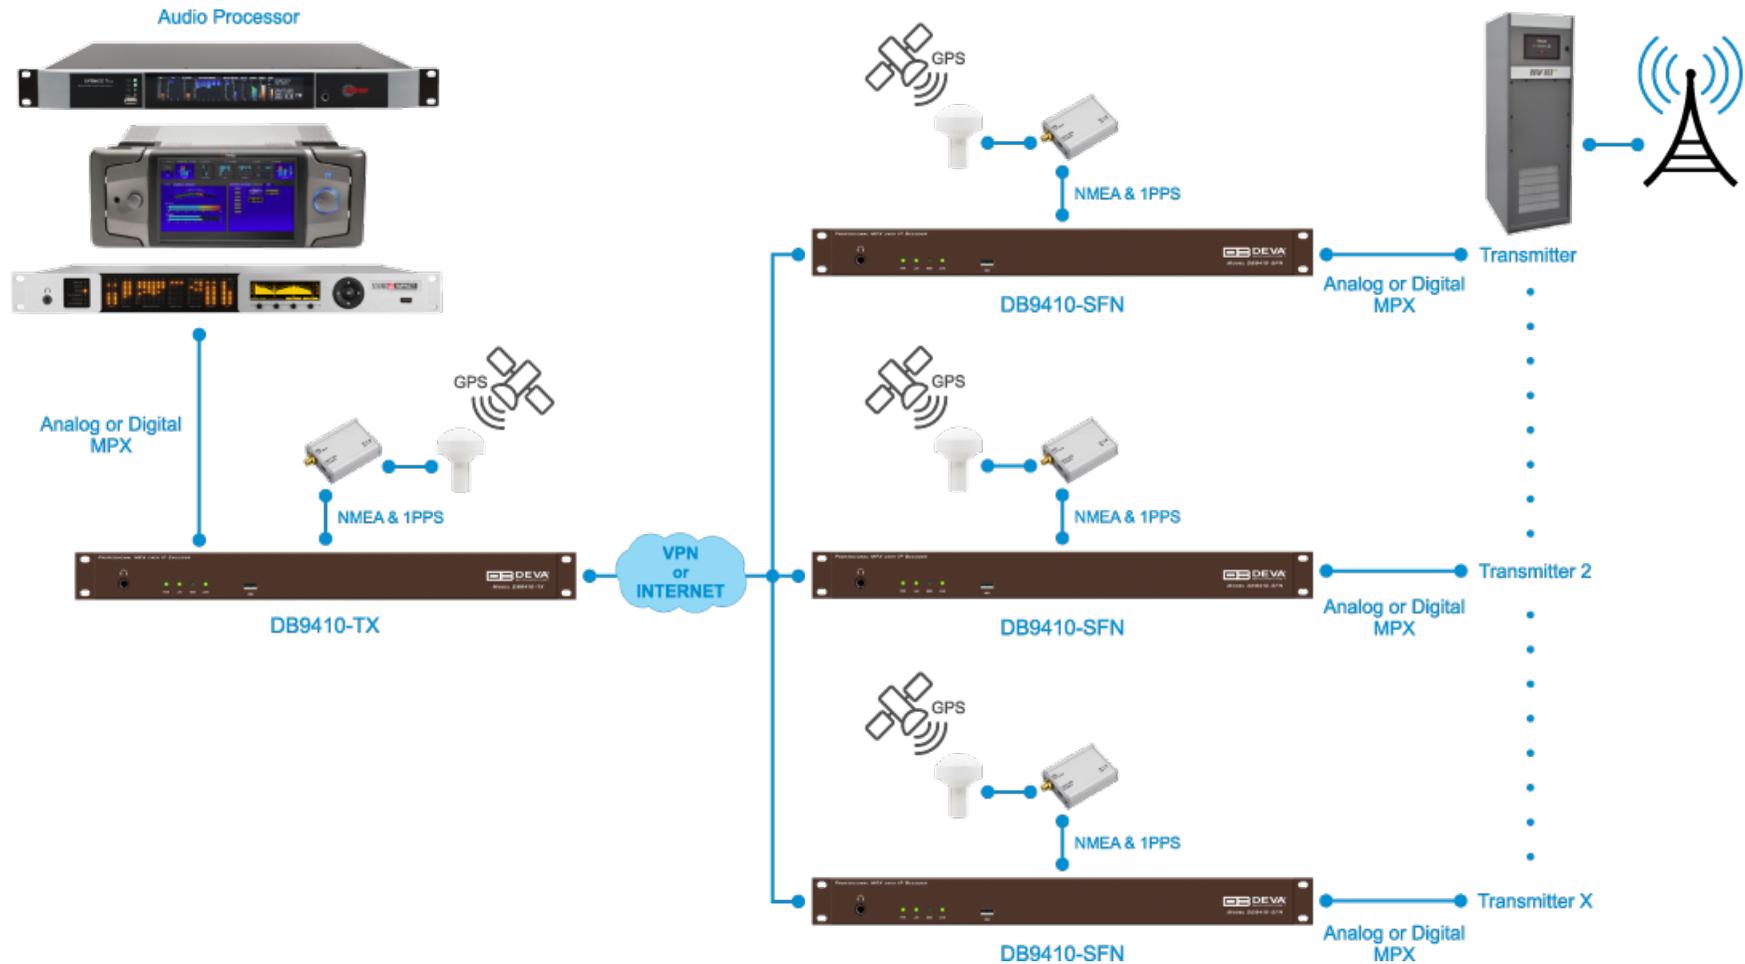

## Technical Notes

### MICROMPX CODEC SETUP TIPS AND BEST PRACTICES

In order for optimal performance to be guaranteed, the MicroMPX encoder and decoder should be configured to match the quality of the IP connection linking them.

If the encoder and decoder are not set up with sufficient protection against impairments in the data stream, the MPX signal quality can deteriorate suddenly and severely. In such cases, the decoder may mute its output for several hundred milliseconds. Proper configuration depends largely on the characteristics of the IP link-particularly packet jitter and packet loss.

### PACKET JITTER

Packet jitter occurs when packets arrive at the receiver at irregular intervals. Some may arrive earlier or later than expected, and in some cases packets may even get reordered.

**TIP:** To compensate for higher jitter levels, increase the decoder's **Stream Delay** buffer

### PACKET LOSS

Packet loss happens when data packets fail to reach the receiver. This can be caused by limited IP bandwidth or by packet corruption during transmission.

**TIP:** To compensate for packet loss, increase the encoder's error correction settings by adjusting the **Stream Error Correction "Size/Delay"** and **"Overhead"** parameters.

**EXAMPLE:** If **Size/Delay** is set to 20 and **Overhead** is set to 3, the system can recover up to three lost packets within a block of 20 packets without any audible impact.

As a general rule:

- If packet loss occurs in occasional bursts, increase both **Size/Delay** and **Overhead**, ensuring that **Overhead** does not exceed **Size/Delay**.
- If one or two packets are lost more frequently, use smaller values for both parameters.

Be aware that higher **Overhead** values and lower **Size/Delay** values increase the data rate. For instance, with **Size/Delay** set to 20 and **Overhead** set to 3, every 20 packets generate 3 additional error-correction packets. This raises the total packet count from 20 to 23, increasing the data rate by approximately 15%.

### FIREWALL AND SECURITY

The DB9410 includes a basic built-in firewall intended to protect the unit from certain network scans and intrusion attempts. This internal protection is not a substitute for a comprehensive external firewall or security strategy and applies only to the DB9410.

The internal firewall blocks selected incoming ports to prevent system services from becoming potential entry points into your network. For optimal security, the use of a properly configured external firewall is strongly recommended.

## TILT CORRECTION

---

DB9410 operates with a flat response and assumes the incoming signal does not require tilt correction. If tilt correction is needed anywhere in the signal chain, it must be applied externally to the DB9410.

To determine whether tilt correction is required, send a square wave through the audio processor into the DB9410 and confirm that a square wave is displayed on the DB9410's meters.

## COOLING

---

DB94 is designed to dissipate heat through its chassis and exchange it with the surrounding air. To ensure proper cooling, do not obstruct the ventilation openings on the top or sides of the unit, and maintain rack ambient temperatures below 40°C.

As with all electronic equipment, excessive heat accelerates component aging. Maintaining a cooler operating environment will help extend the service life of the unit.

## WEB Interface

DB9410 series are controlled through a built-in WEB Server and a standard web browser can be used to monitor its status or to make some adjustments. To operate the device you need to know its IP Address. In case you are not aware of it, you can hear it through the headphones when you turn on the device. Alternatively, use the Network discovery feature at Local networks. Then open a new WEB Browser and enter the device IP address in the address field then press [Enter].

### NETWORK DISCOVERY

---

This is a network setting that defines whether your computer can see (find) other computers and devices on the network and whether other computers on the network can see your computer. By default, Windows Firewall blocks network discovery but you can enable it.

1. Open Advanced sharing settings by clicking the Start button, and then on “Control Panel”. In the search box, type “network”, click “Network and Sharing Center”, and then, in the left pane click “Change advanced sharing settings”;
2. Select your current network profile;
3. Click Turn on network discovery, and then click save changes.

**NOTE:** If you’re prompted for an administrator password or confirmation, type the password, provide confirmation or contact your system administrator.

If you have already enabled this function on your computer DB9410 will be automatically added to the Device list section. The device will be ready for usage and no additional adjustments will be required except user name and password.

### ACCESS

---


DB9410 provides you with a protected access to the device settings. To make the necessary adjustments to the device, please log in as an ADMINISTRATOR. The default values being username: **admin**, password: **pass**.



The screenshot shows the login page of the DEVA web interface. At the top left is the DEVA BROADCAST logo. At the top right is an 'Account' link with a user icon and a dropdown arrow. The main content area has a dark background and contains the following elements:

- An 'Account' label.
- A 'User name' label followed by a text input field.
- A 'Password' label followed by a password input field.
- A 'Log in' button centered below the input fields.

## STREAM

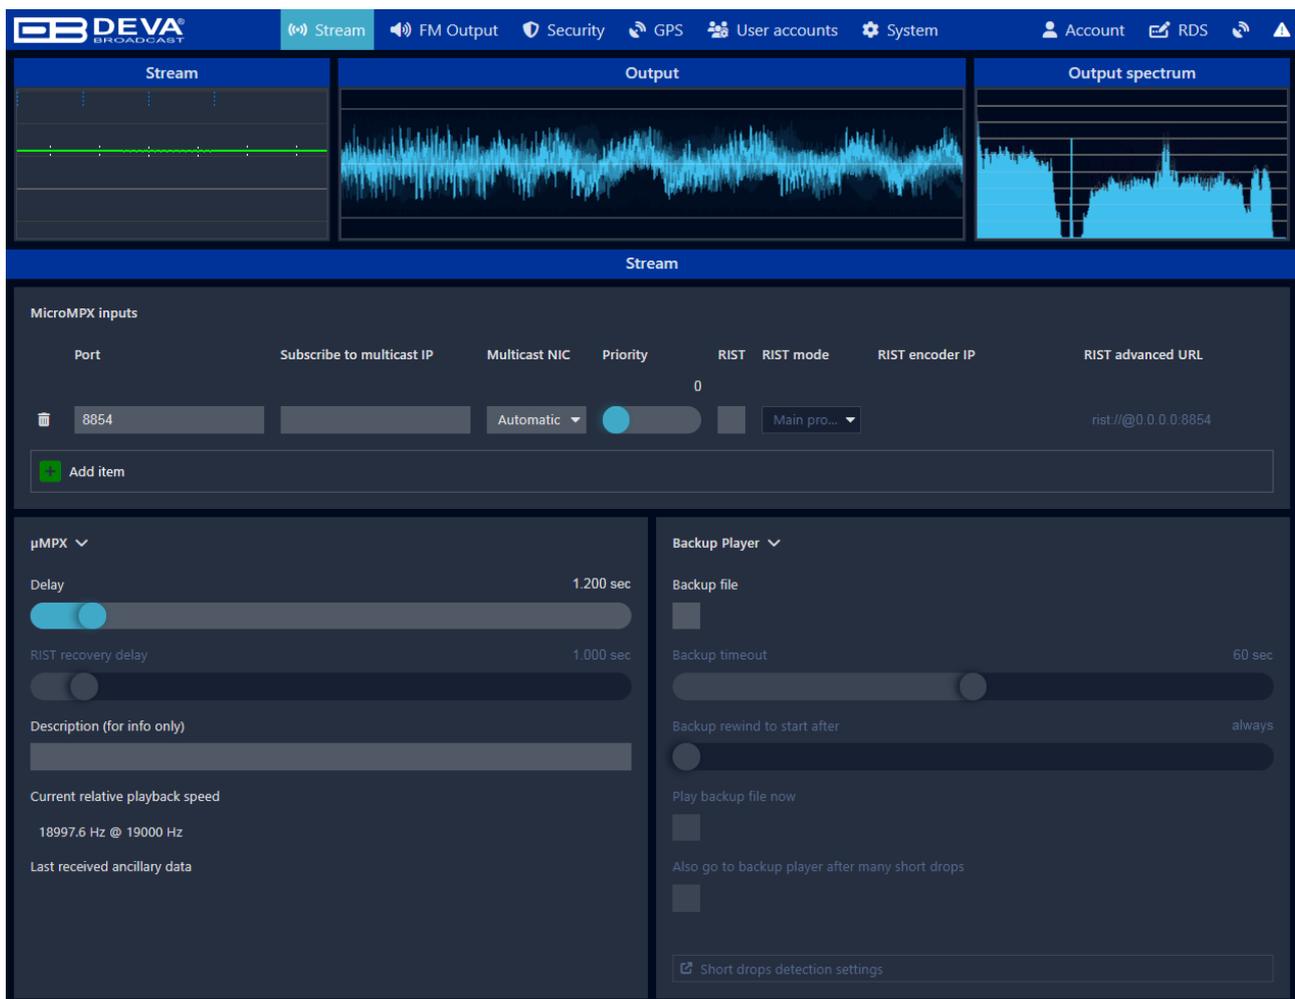

Upon opening the WEB interface, the main Stream window will appear. The page contains information on the MicroMPX Inputs as well as visual interpretation of the Stream, Output and Output spectrum.

You can prepare a file with emergency audio to be played in case you have a connection drop out.

The MicroMPX decoder expects a 192 kHz mono file that contains MPX data, normalized to 0dB, in WAV or FLAC format. The file is transmitted as-is, so it needs to be pre-emphasized and it must contain stereo and RDS signals.

MPX files can be generated by recording the output of an FM processor (or even the received signal from a tuner that doesn't demodulate the MPX signal). Or you can use a program like Thimeo WatchCat (<https://www.thimeo.com/watchcat/>) to generate an MPX file from an audio file.

### Backup player

- Through this screen are applied all needed settings to the alternative sources.

The backup player will start only after Backup timeout time of no usable MicroMPX data elapses. If a few packets arrive and then the signal disappears again, it will continue the backup file playback where it left off, unless the backup player hasn't been used in Backup rewind to start after time. In that case it will start at the beginning. If you always want it to start at the beginning (for example if you have a loop of jingles as backup file), you can set that time to 0.

## MPX Output Level

The **MPX Output Level** slider controls the composite output level of the decoder.

- The factory default setting is 0.00 dB (100.0%).
- Under normal operation, this setting should remain at 0.00 dB.

### Adjusting the Output Level

To reduce the composite output level feeding the transmitter:

1. Click and drag the **MPX Output Level** slider to the left.
2. Release the slider to apply the new setting.
3. A green “Updated” confirmation message will appear in the upper-right corner of the screen. The selected level is automatically saved upon adjustment.

### Important Level Considerations


Signal levels must be properly optimized at the **Encoder**.

While the output level may be reduced at the Decoder:

- If the incoming MicroMPX signal is clipped or distorted due to excessive encoding levels,
- Adjusting the MPX Output Level at the Decoder will not correct distortion introduced at the source.

Proper level management must be performed at the Encoder.

## Stream Receiver Configuration

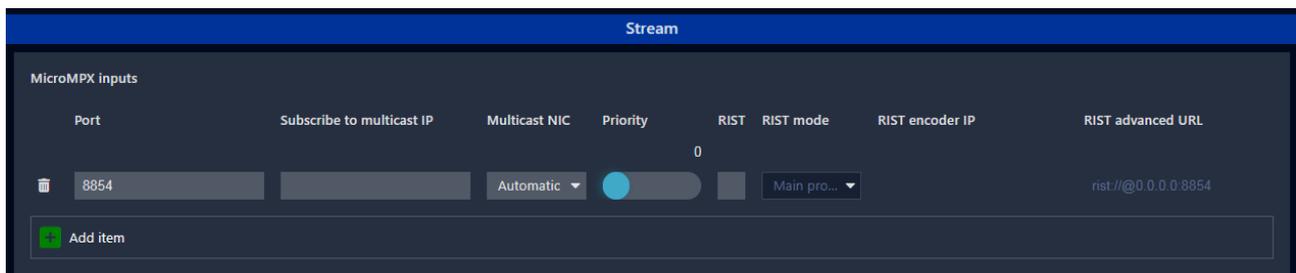

The DB9410 provides Main and Alternate port addresses for receiving inbound streams.

- Factory Default Port: 8854
- The configured port must match the port number used by the transmitting Encoder.

### Changing the Port Number

Ports may only be changed when:


- The selected port is **inactive**, or
- The **Decoder is set to Off**

To change the port number:

1. Double-click the **Port Number** field.
2. Enter the desired port number.
3. Click **Save** to apply changes.

Ports may also be switched via **GPI control**. Port switching may require one to two seconds to complete, depending on the interval between keyframes in the incoming stream. Switching is not instantaneous and may not be completely seamless.

## FM OUTPUTS

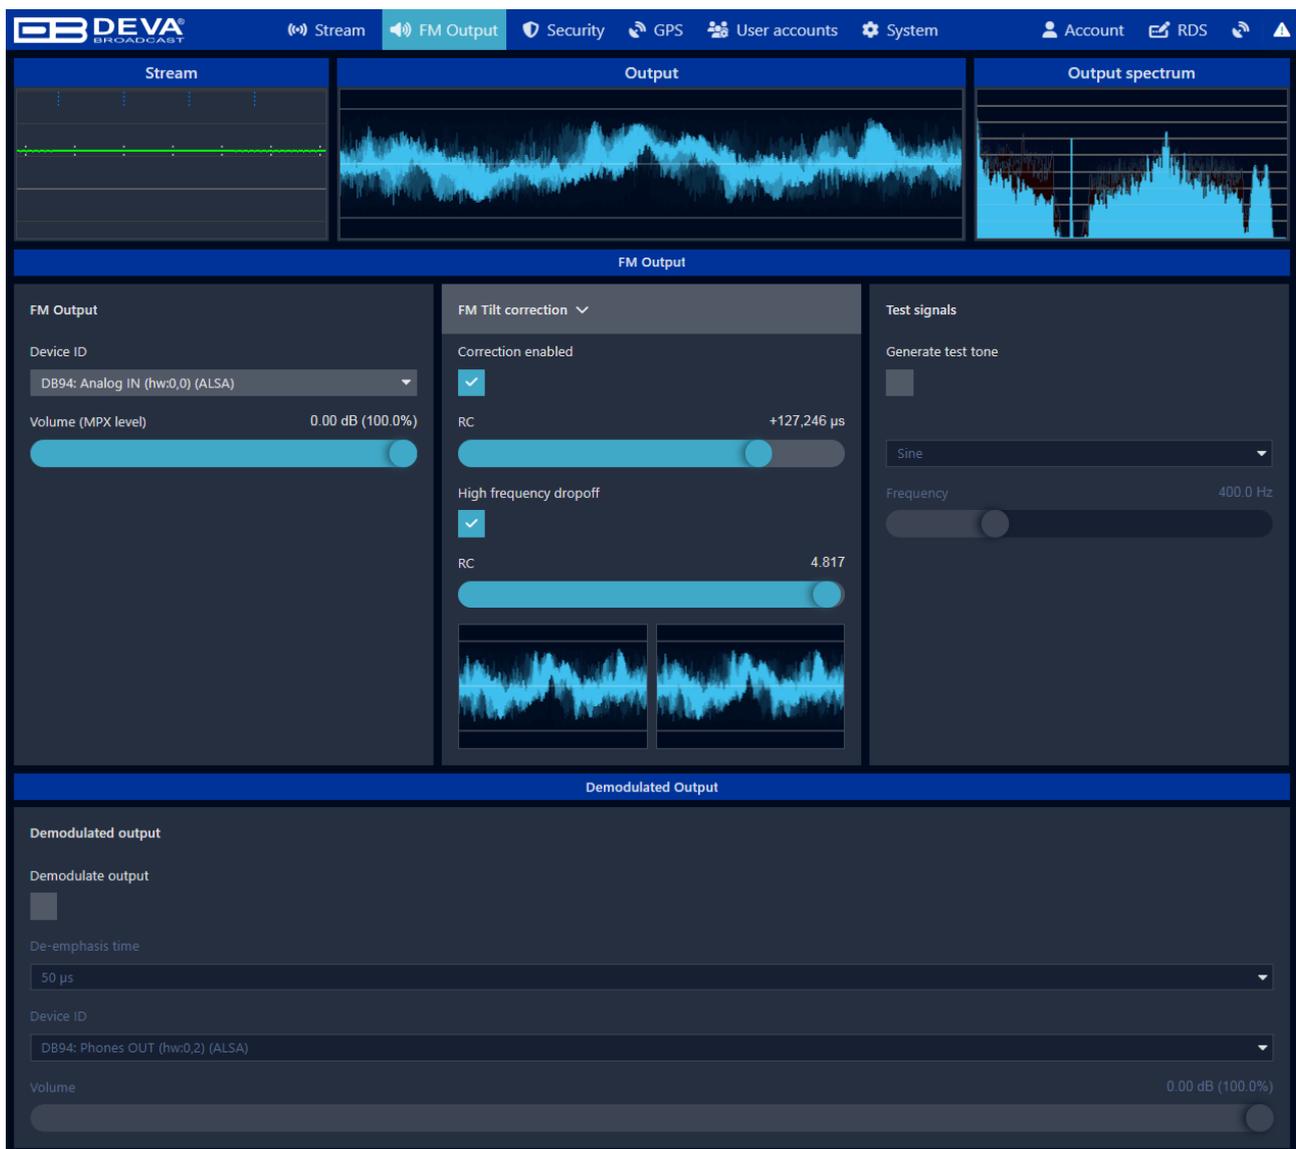

The screenshot displays the DEVA Broadcast WEB Interface for FM Output settings. The interface is divided into several sections:

- Stream:** Shows a green line representing the stream level.
- Output:** Displays a real-time audio waveform.
- Output spectrum:** Shows a frequency spectrum plot.
- FM Output Settings:**
  - Device ID:** DB94: Analog IN (hw:0,0) (ALSA)
  - Volume (MPX level):** 0.00 dB (100.0%)
  - FM Tilt correction:** Correction enabled (checked), RC: +127,246  $\mu$ s
  - High frequency dropoff:** High frequency dropoff (checked), RC: 4.817
- Test signals:**
  - Generate test tone:
  - Tone type: Sine
  - Frequency: 400.0 Hz
- Demodulated Output Settings:**
  - Demodulate output:
  - De-emphasis time: 50  $\mu$ s
  - Device ID: DB94: Phones OUT (hw:0,2) (ALSA)
  - Volume: 0.00 dB (100.0%)

FM Output and Demodulated output settings are applied in this section of the WEB Interface.

For FM Output, you can change **Device ID**, **MPX level volume**, **FM Tilt correction**, **RC High frequency dropoff** and **RC**.

You can also generate a test tone. To enable the mode: Select the “Test tone Mode” to activate it. Then configure tone settings.

### Demodulated Output

- These settings provide all the needed adjustments to the algorithm which DB9410 demodulates and manipulates the signal.

## Test Signal Generator

A built-in Test Signal Generator is provided for setup, alignment, and calibration purposes.

### **IMPORTANT NOTE:**

Enabling the Test Signal will interrupt normal program audio.

### Signal Capabilities

- Sine wave generation range: 1 Hz to 80 kHz
- Output replaces the incoming program audio while active

### Setting Frequency

The test frequency may be adjusted using one of the following methods:

#### **Method 1 - Slider Adjustment**


1. Use the Frequency slider for coarse adjustment.

#### **Method 2 - Direct Entry**


1. Click on the Frequency numeric field.
2. Enter the desired frequency value.
3. Confirm the entry.

The Test Signal may be turned On or Off via GPI control.

## DECODER DASHBOARD

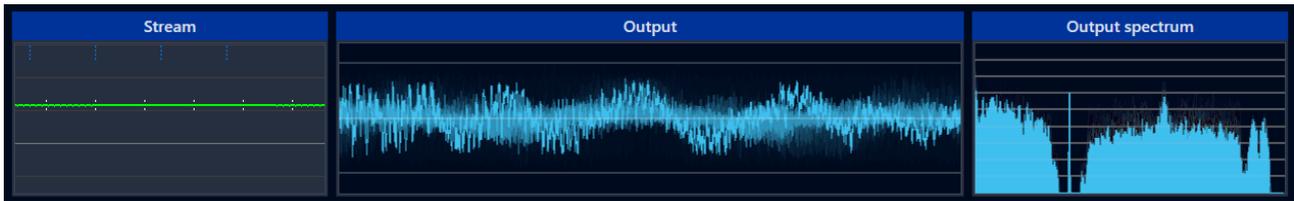

### Stream Display

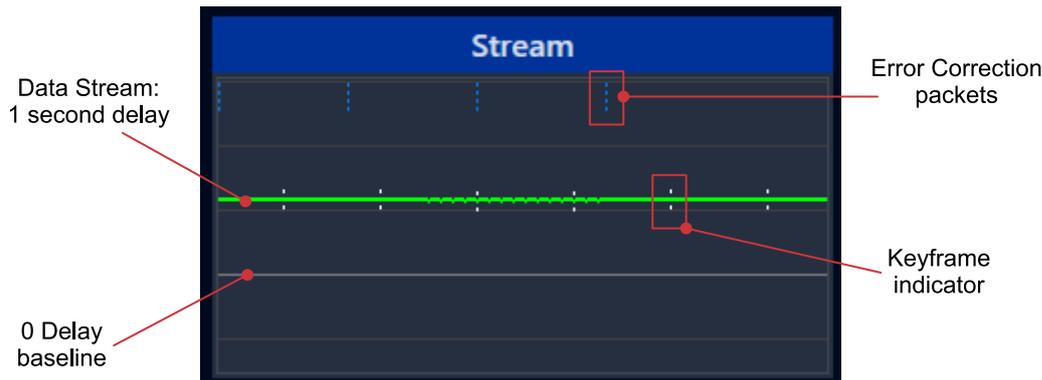

The Stream Display provides a visual health indication of the incoming MicroMPX data stream. Adjustments made in the Encoder's **Error Correction** settings directly influence this display. The Stream Display contains the following visual indicators:

- Bold horizontal gray line - Represents **0 time delay**.
- Horizontal green line - Represents the **incoming data stream**. (Example: A display showing the green line above the zero reference may indicate 1 second of Decoder delay.)
- Short white vertical marks intersecting the green line - Represent **Keyframes**.
- Blue vertical lines - Represent **Error Correction packets**.
  - The density of blue lines increases as Error Correction is increased at the Encoder.
  - Higher levels of error correction require additional Decoder delay to allow proper buffering.
- Red vertical lines - Represent **lost packets** or **transmission errors**.

### Packet Loss and Dropouts


Frequent red indicators may result in audible dropouts. If packet loss occurs regularly:

- Adjust Encoder Error Correction settings.
- Reduce the MicroMPX bitrate.
- Increase Decoder delay to improve buffering.
- Verify network stability and configuration.
- Inspect:
  - External network QoS settings
  - Routers and switches
  - ISP connection quality
  - Other external network components

If persistent dropouts cannot be resolved:

- Consider implementing redundant streams over two independent networks ([see “Redundant Paths and Backup Scenarios” on page 35](#)).


## Waveform Display

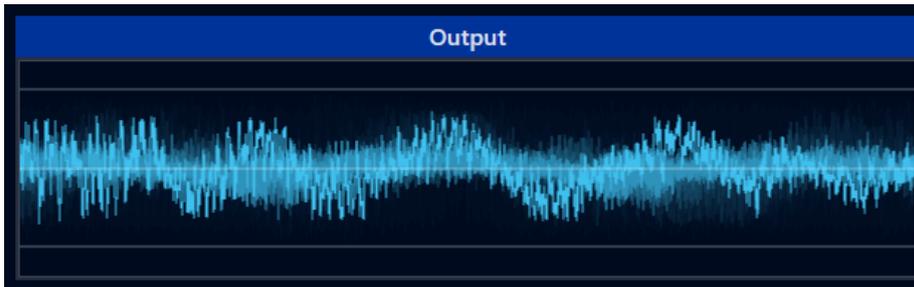

The Waveform Display provides a real-time visual representation of the program signal.

- Silence, steady tones, and dense program material (e.g., music) are visually distinguishable.
- Useful for quick confirmation of signal presence and modulation activity.

## MPX Display

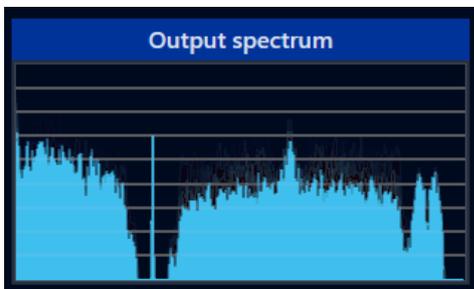

The MPX Display provides a composite-level view of the FM baseband signal, including:

- L+R (Main Audio)
- 19 kHz Stereo Pilot
- L-R (Stereo Difference Signal)
- RDS Subcarrier

**IMPORTANT:** The Waveform and MPX displays are captured before the MPX Output Level control.

Adjusting the MPX Output Level slider affects the signal sent to the transmitter, but does not change the graphical displays shown on the Dashboard.

## SECURITY

Allows you to password protect the stream.

**IMPORTANT:** If you're streaming over a public internet connection and other people could potentially send data to the same IP:PORT combination, they could overrule your stream.

You can use a hashcode to protect against that. Only streams coming from an encoder which uses the same hashcode will decode as valid audio. A hashcode can be typed in directly, or generated from a "password". Note that if someone has access to the web interface, they can copy the hashcode and override your stream (but they could do that anyway if they have access).

The hashcode must be identical in the encoder and all the decoders, any mismatch will cause the decoder to go silent, and you'll get lots of error messages because the packages that arrive will be decoded incorrectly and contain garbage. So if you turn this on, it must be enabled in both the encoder and all the decoders.

You can either generate the hash from a password (which can be easy to remember, so you can type it in on all units and hit "Password to hash"), or you can copy the hash itself, which is probably more difficult to remember, but it also means that if you forget the password and you have a network of 200 decoders and you want to add one, you don't need to set a new password on the other 200 units.

## GPS

**APPLICABLE FOR THE DB9410-SFN MODEL ONLY**



MicroMPX will normally keep your decoders in sync within a few milliseconds, which is good enough for seamless RDS AF switching. But if you have a Single Frequency Network (multiple transmitters at the same frequency with overlapping reception areas) and you want to control exactly where the signals add up instead of interfere with each other, you need accurate timing. Typically, a precision of less than a microsecond is required (one millionth of a second).


To do this, the MicroMPX encoder needs to add timestamps to the audio, and all the decoders need to precisely synchronize when they play the audio using a GPS clock.

For each decoder, you need a GPS receiver with PPS (Pulse Per Second), NMEA support.

### Decoder

For the decoder, we sell a GPS receiver that is fully compatible with the DB9410 series. Alternatively, you can use your own – the GPS receiver must be able to send NMEA data to a COM port and a 1PPS pulse signal to the DB9410 device.

### Connecting a third party GPS receiver

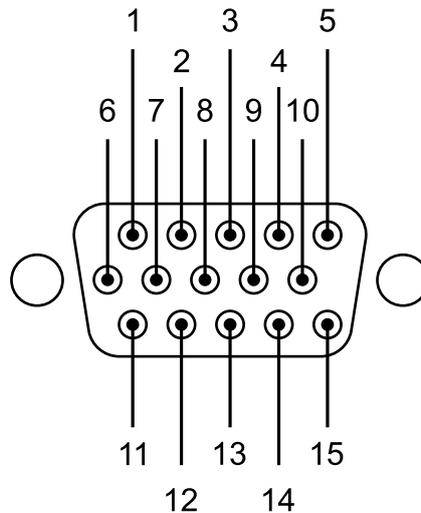

*DB15 HD, Male*

Pin	Function	Direction
1	GPI2	Opto isolated Input
2	<b>GPS RX</b>	<b>GPS Communication Output</b>
3	<b>5V GPS</b>	<b>GPS +5V, Fuse protected (0.5A)</b>
4	GPO3	Solid State Relay
5	GPO1	Solid State Relay
6	GPI3	Opto isolated Input
7	GPI1	Opto isolated Input
8	<b>GPS TX</b>	<b>GPS Communication Input</b>
9	<b>PPS IN</b>	<b>GPS PPS (Pulse Per Second) Input</b>
10	GPO2	Solid State Relay
11	GPICOM	Common GPO rail
12	GP5V	+5V (Out), Fuse protected (0.5A)
13	<b>GPS GND</b>	<b>GPS Ground</b>
14	GPGND	GPIO Ground
15	GPOCOM	Common GPO rail

**5V GPS & GPS GND** – power supply for the GPS module. **NOT TO BE USED FOR GPIO.**

**GPS TX** – Input - RS232 NMEA0183 serial communication with the GPS module.

**GPS RX** – Output - RS232 NMEA0183 serial communication c GPS module

**PPS IN** – Input - PPS (Pulse Per Second) signal from the GPS module

Connect the GPS receiver to the DB9410-SFN. Then connect the DB9410 with the GPS receiver cable provided with the DEVA GPS Receiver set.

Then, go to GPS in the decoder web interface and enable the SFN synchronization:



Initially, the GPS timestamps from the encoder, the timestamps of the GPS receiver on the decoder and the time (in samples) between 1PPS pulses will be displayed. If enabled, the I/O loopback delay will show an estimated delay time in milliseconds.

If the 1PPS pulses and loopback delay values don't appear after a few seconds or if they jump wildly, you may have swapped the left and right channels, so try swapping them. The right output channel (the one that contains the audio used for loopback delay measurements) sounds like a constant beep, so if you hear that where you expect your MPX signal, the output channels are probably swapped.

After about 30 seconds, the I/O loopback delay will light up and show an exact time (the measurement is accurate with a precision of 0.01 microseconds).

As soon as the GPS signal is recognized and synchronized to the signal from the encoder (so make sure that the encoder is sending GPS timestamps), the GPS lock icon will light up as it did in the encoder. As soon as that's the case, usually within 2 minutes, if you have multiple decoders that are configured identically and show a GPS lock, the audio is synchronized. The offset in the delays of the decoders should now be constant within about 0.5 microseconds.

To fine-tune where the signals interfere and where they boost each other, you can use the "GPS precise delay" slider. Make sure though that the main "Delay" slider is set to the same setting for all decoders.

## Understanding the MicroMPX Decoder stream info display

The MicroMPX Decoder web interface has a display that shows a lot of information about incoming stream packets.



The green pixels indicate that a packet was received without issues. The distance between each green pixel and the brightest horizontal line indicates how much time was left when the packet was decoded, before a drop would have been caused. The thinner horizontal lines indicate seconds, so all the green packets here arrive between about 0.6 and 1.0 seconds before it's too late – which corresponds with a Delay setting of about 1 second.

Yellow pixels (1) indicate a packet that was restored using recovery packets (drawn in blue, 3). In this case a single packet was lost, so as soon as the first recovery packet has arrived it could be reconstructed and decoded. At that point, based on where the yellow dot is drawn, about 0.4 seconds of time were remaining for decoding it in time.

As you can see here, after a sequence of blue (recovery) packets, the green pixels have a bigger delay, which is caused by the rate limiter: Because it takes some time to send all the recovery packets, the packets for the next block of audio are delayed a bit. Increasing the rate limiter maximum speed will reduce these drops – but as described before, increasing it too much may cause dropouts.


White pixels above and below the green line (2) indicate keyframes.

If the decoder plays silence, the background of this display (at that point in time) is colored red.



If you see occurrences like this, you can see that the yellow packet was recovered only just in time, and that could be a reason to increase the Delay a bit. Or reduce the forward error correction span setting.

## USER ACCOUNTS

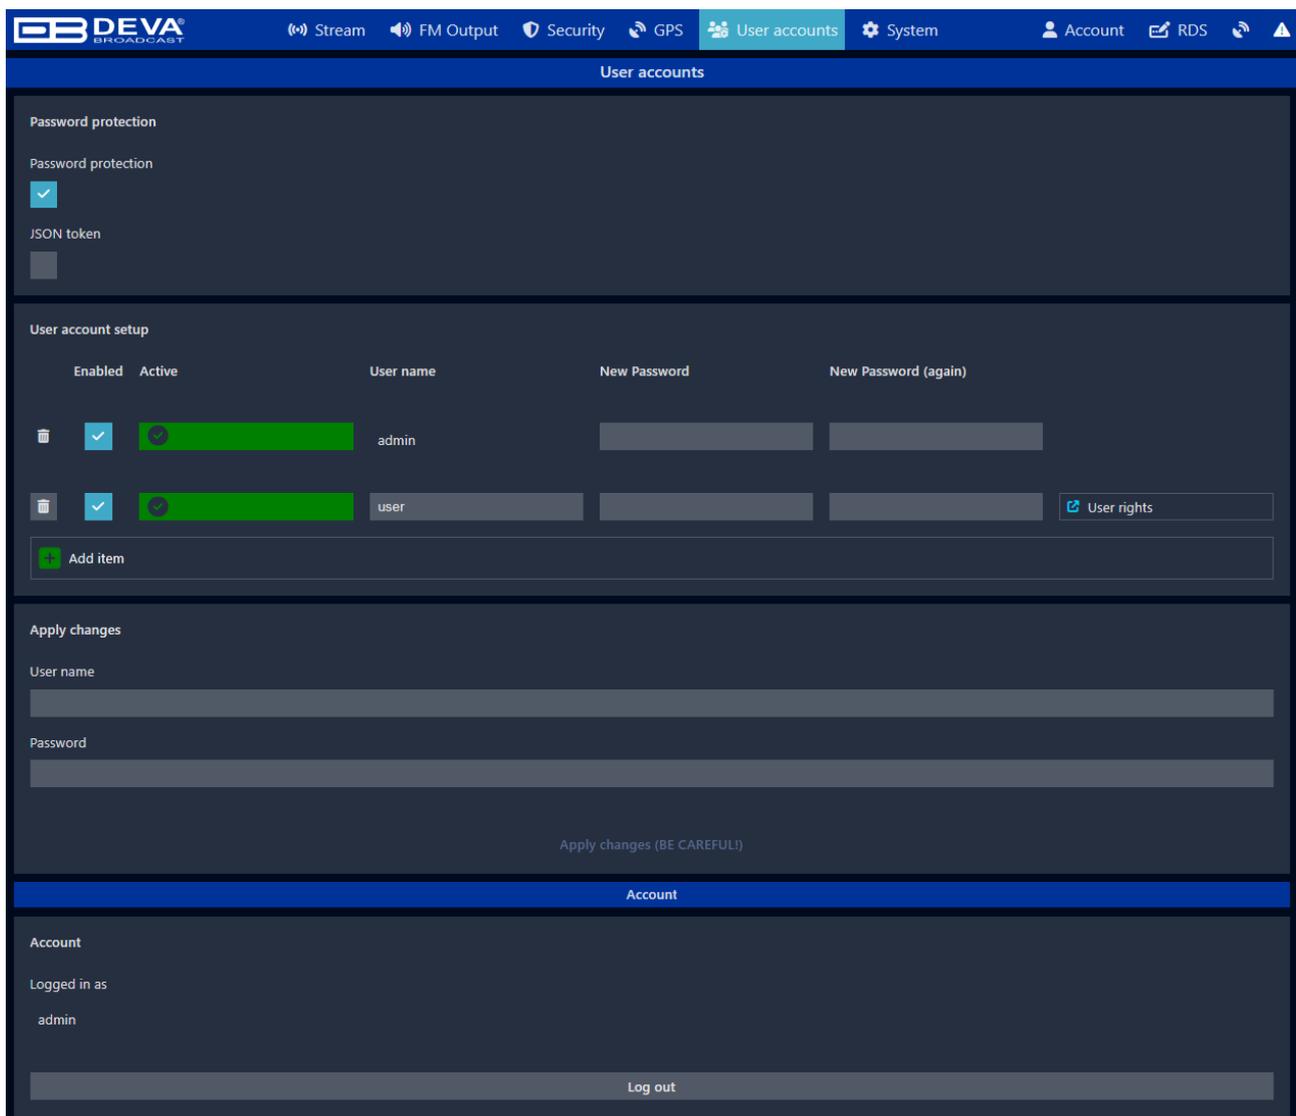

DB9410 provides you with protected access to the device settings. You can choose between two types of log in.

### as Administrator

- It will give you full control over the device’s settings;


### as User

- that will allow you to just monitor the device, while all the settings remain locked.

In order for the security of DB9410 to be enhanced, new username and password could be set from the Security section.

You can also generally disable the password protection option or select JSON token.


## SYSTEM

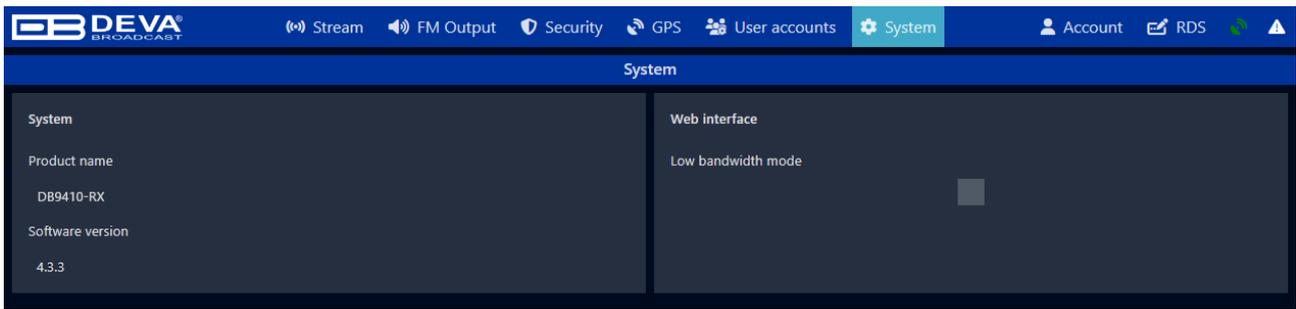

The screenshot shows the 'System' status page in the DEVA interface. The top navigation bar includes 'Stream', 'FM Output', 'Security', 'GPS', 'User accounts', 'System' (active), 'Account', 'RDS', and a notification icon. The main content area is titled 'System' and is split into two columns. The left column displays system information: Product name (DB9410-RX) and Software version (4.3.3). The right column displays 'Web interface' with a 'Low bandwidth mode' toggle switch.

Contains information on the current System status.

## ACCOUNT

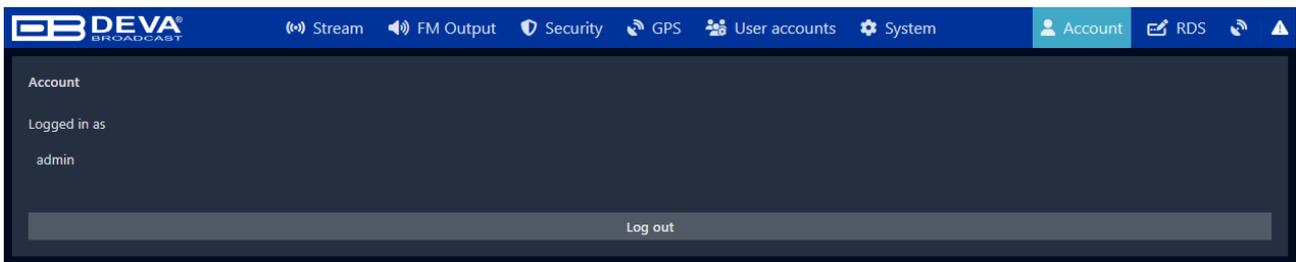

The screenshot shows the 'Account' page in the DEVA interface. The top navigation bar is the same as the System page, but 'Account' is the active tab. The main content area is titled 'Account' and shows 'Logged in as admin'. At the bottom of the content area, there is a 'Log out' button.

Information on the account with which you are logged-in.

## RDS



The screenshot shows the 'RDS' control page in the DEVA interface. The top navigation bar has 'RDS' as the active tab. The main content area is split into two panels: 'Output' on the left, showing a waveform of the audio signal, and 'Output spectrum' on the right, showing a frequency spectrum. Below these panels is a control bar with 'Override incoming RDS' and a power icon. A warning message is displayed: 'WARNING Replacing or removing the RDS signal may lead to loss of loudness. ONLY USE THIS IF YOU KNOW WHAT YOU ARE DOING.' Below the warning is a dropdown menu labeled 'Override RDS (read the warnings!)' with 'Use original RDS signal' selected.

Allows you to override the incoming RDS. Bear in mind that removing the RDS signal may lead to loss of loudness.

## APPENDIX A - Possible problems and solutions

This section describes some issues that you might run into, plus and information on how to solve them.

### **PEAK CONTROL IS NOT PERFECT**

---

Make sure that the input level and gain on the encoder are set such that peaks in the input signal reach exactly 0 dB (100%) on the waveform display. A warning will be shown if the level is too low. **NOTE** that setting it too high is bad as well, because values above 100% cannot be encoded, so the level must match exactly.

## APPENDIX B - Recovery mode

Recovery mode is designed to fix, update, or reinstall the DB9410's core operating system when the main firmware is corrupted, in need of firmware update or malfunctioning (a "bricked" state). It allows re-flashing the device's firmware to restore normal operation.

In this mode, the device cannot perform normal tasks, but instead acts as a receiver for new, clean firmware files.


**IMPORTANT:** Using recovery mode to reinstall firmware may wipe all user settings and data from the device.

### HOW TO ENTER RECOVERY MODE?

1. Locate the RESET button on Rear panel;




2. Press and hold the RESET button;
3. Keep pressing the RESET button and hold until the POWER and MEMORY LEDs blink 3 times alternately, then stop. This indicates that the device has entered RECOVERY mode;
4. Release the RESET button;
5. Allow 1 minute for the device to boot;
6. Open the devices RECOVERY WEB interface. For this purpose, you will need to know the DB94's IP address. If you are not aware of it, please use the DEVA Ethernet Setup Tool ([see "DEVA Ethernet Setup Tool" on page 27](#)).
7. A successful log-in will look as follows:

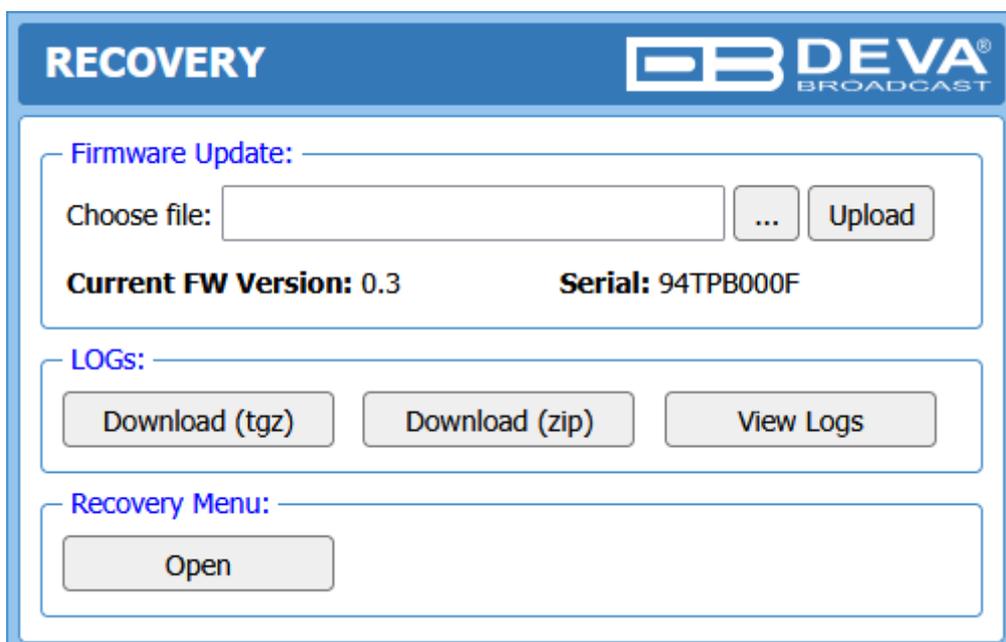


## FIRMWARE UPDATE

The firmware update section allows users to verify the current firmware version, device serial number and installing updates.

1. In section Firmware Update press [Choose file];
2. Select the **.upgbox** file to be used and press [Open]. The latest firmware is available for downloading at <http://www.devabroadcast.com/downloads>

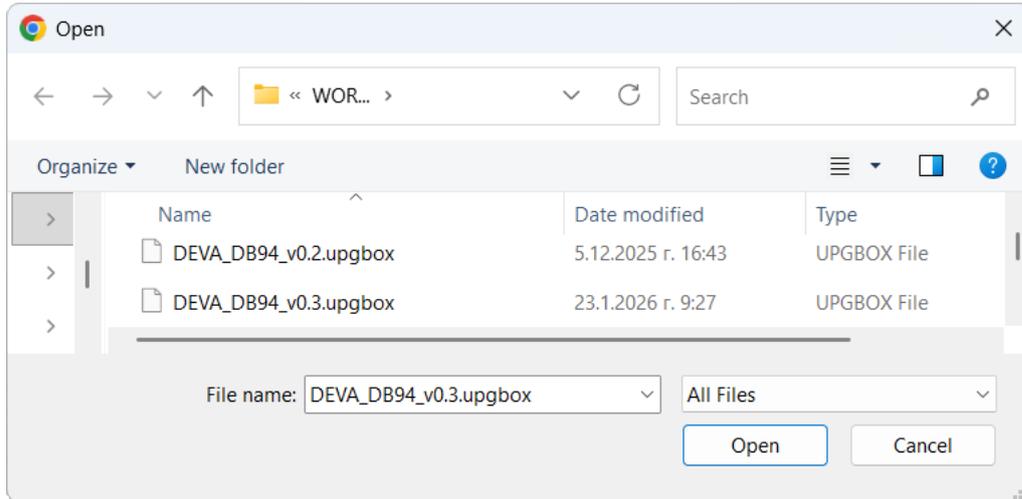


3. The following message indicating start of the process will appear:

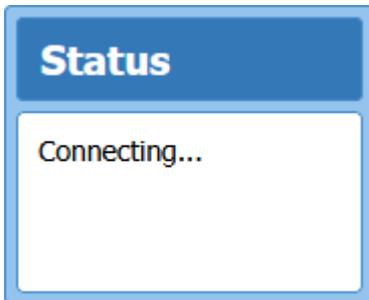


4. A message indicating "Copying of the system" will appear:



- Once system file copying finishes, press [OK] when prompted to initiate the final installation phase:

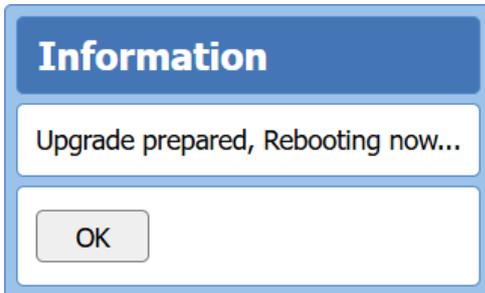


- Upon Rebooting, the device will loose it's network connection and you will need to reconnect to the WEB Interface manually.

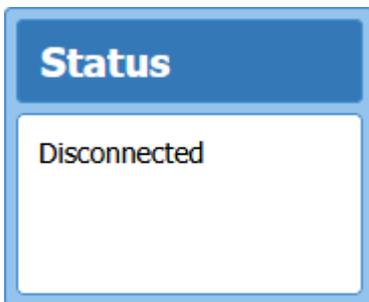

- The IP address of the device will be changed. You will need to use DEVA Ethernet Setup Tool ([see "DEVA Ethernet Setup Tool" on page 27](#)) to find the newly assigned IP.

## LOGs


The Recovery mode is also used for accessing, viewing, or downloading of the system logs.

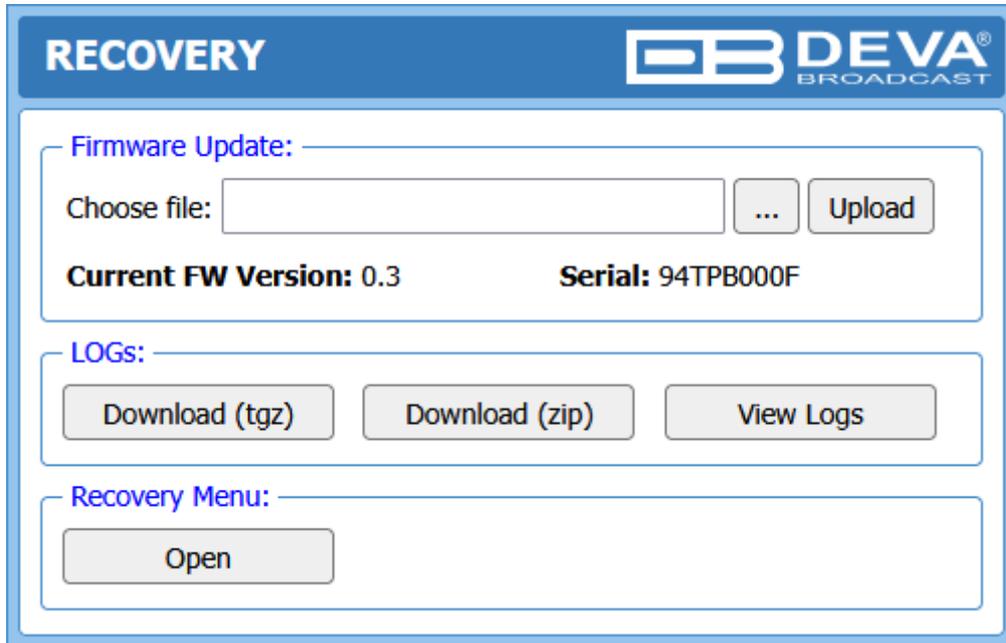

The screenshot shows the 'RECOVERY' interface with the DEVA BROADCAST logo. It features three main sections: 'Firmware Update' with a file selection field and an 'Upload' button; 'LOGs' with buttons for 'Download (tgz)', 'Download (zip)', and 'View Logs'; and 'Recovery Menu' with an 'Open' button. The current firmware version is 0.3 and the serial number is 94TPB000F.

## RECOVERY MENU

Recovery menu is a built-in troubleshooting environment used to factory reset, reboot or update the firmware.

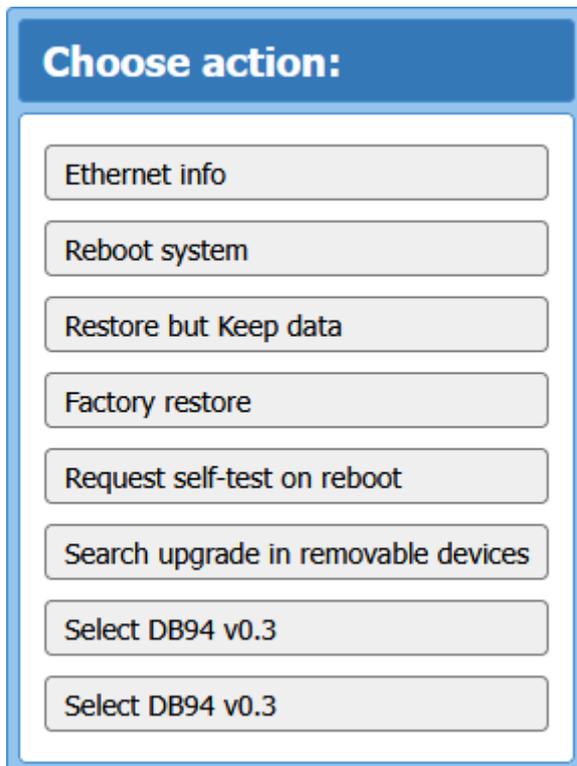

The screenshot shows the 'Choose action:' menu with the following options: Ethernet info, Reboot system, Restore but Keep data, Factory restore, Request self-test on reboot, Search upgrade in removable devices, Select DB94 v0.3, and another Select DB94 v0.3 option.

## WARRANTY TERMS AND CONDITIONS

**I. TERMS OF SALE:** DEVA Broadcast Ltd. products are sold with an understanding of “full satisfaction”; that is, full credit or refund will be issued for products sold as new if returned to the point of purchase within 30 days following their receipt, provided that they are returned complete and in an “as received” condition.

**II. CONDITIONS OF WARRANTY:** The following terms apply unless amended in writing by DEVA Broadcast Ltd.

**A.** The Warranty Registration Card must be completed and returned to DEVA Broadcast Ltd. within 10 days of delivery. Product registration can also be done digitally at <https://www.devabroadcast.com/members/product-registration>, after registering on our website, within 10 days of delivery.

**B.** This Warranty applies only to products sold “as new.” It is extended only to the original end-user and may not be transferred or assigned without prior written approval by DEVA Broadcast Ltd.

**C.** This Warranty does not apply to damage caused by improper mains settings and/or power supply.

**D.** This Warranty does not apply to damage caused by misuse, abuse, accident or neglect. This Warranty is voided by unauthorized attempts at repair or modification, or if the serial identification label has been removed or altered.

**III. TERMS OF WARRANTY:** DEVA Broadcast Ltd. products are warranted to be free from defects in materials and workmanship.

**A.** Any discrepancies noted within TWO YEARS of the date of purchase will be repaired free of charge, or the equipment will be replaced with a new or remanufactured product at DEVA Broadcast Ltd. option.

**B.** Parts and labor for factory repair required after the two-year Warranty period will be billed at prevailing prices and rates.

### IV. RETURNING GOODS FOR FACTORY REPAIR:

**A.** Equipment will not be accepted for Warranty or other repair without a Return Material Authorization (RMA) number issued by DEVA Broadcast Ltd. prior to its return. An RMA number may be obtained by placing an RMA request at <https://www.devabroadcast.com/rma>. The number should be prominently marked on the outside of the shipping carton.

**B.** Equipment must be shipped prepaid to DEVA Broadcast Ltd. Damage sustained as a result of improper packing for return to the factory is not covered under terms of the Warranty and may occasion additional charges.

### V. UPDATES TO THE TERMS OF SERVICE:

For the most up-to-date, valid, and accurate terms, conditions, and product documentation, please visit the official DEVA Broadcast Ltd. website downloads section at <https://www.devabroadcast.com/downloads/deva-documents>. Printed documents may not reflect recent amendments. Reviewing the current online versions ensures you have the latest information.



DEVA Broadcast Limited is an ISO 9001:2015 / ISO 14001 / ISO 45001 / ISO 27001 certified company.

## PRODUCT REGISTRATION CARD

- All fields are required, or warranty registration is invalid and void

Your Company Name \_\_\_\_\_

Contact \_\_\_\_\_

Address Line 1 \_\_\_\_\_

Address Line 2 \_\_\_\_\_

City \_\_\_\_\_

State/Province \_\_\_\_\_ ZIP/Postal Code \_\_\_\_\_

Country \_\_\_\_\_

E-mail \_\_\_\_\_ Phone \_\_\_\_\_ Fax \_\_\_\_\_

Which DEVA Broadcast Ltd. product did you purchase? \_\_\_\_\_

\_\_\_\_\_  
\_\_\_\_\_

Product Serial # \_\_\_\_\_

Purchase date \_\_\_\_ / \_\_\_\_ / \_\_\_\_

Installation date \_\_\_\_ / \_\_\_\_ / \_\_\_\_

\_\_\_\_\_  
Your signature\*

\*Signing this warranty registration form you are stating that all the information provided to DEVA Broadcast Ltd. are truth and correct. DEVA Broadcast Ltd. declines any responsibility for the provided information that could result in an immediate loss of warranty for the above specified product(s).

**Privacy statement: DEVA Broadcast Ltd. will not share the personal information you provide on this card with any other parties.**